

# DINOSAUR ELECTRONICS


## Instructions for the UIB L Rev. 7.0

**This board should be installed by trained service technicians**

This board comes from the factory configured as:

- Delayed, 3-try\*\*
- 20 sec. delay, 6 sec. fire, 20 sec. between fire cycles\*\*
- local flame sense
- 0.3 microamp flame sensitivity

\*\*When the instant fire jumper is cut, the purge time between fire cycles is changed to 1 minute.

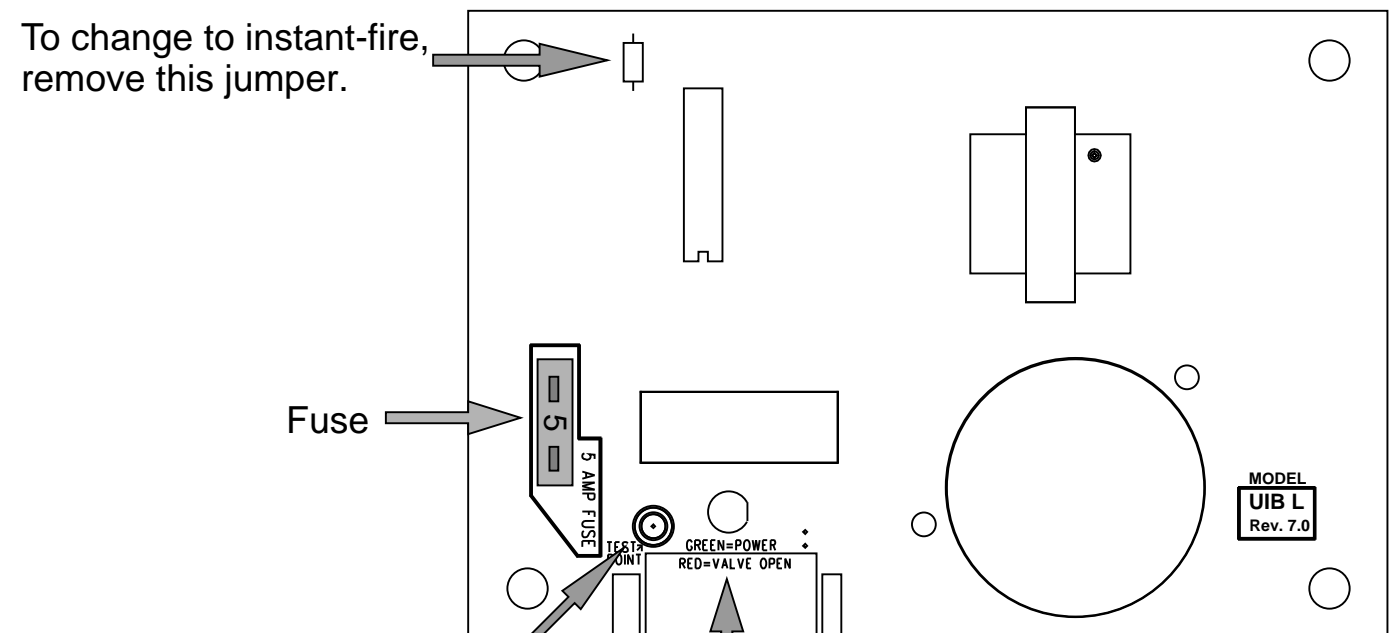

Touch the red probe of your multimeter to this point to check supply voltage to the board.  
( should be between 10 and 19 volts on DC scale )

If this LED does not light up green, then check:  
LIMIT SWITCH  
SAIL SWITCH  
5 AMP FUSE (on circuit board)

# Single Try / Instant fire Operation Instructions for Ignitor Boards

Use a pair of diagonal cutters (wire cutters) to cut and remove this jumper to set the board's operation to:

**INSTANT FIRE** for models **UIB S, UIB S Post, UIB L and UIB L Post.**

**SINGLE TRY** for models **UIB 24 VAC, UIB Fan Control Large and UIB Fan Control Small.**

