FAIRLEAD PLOW PULLEY (STANDARD/WIDE)

Pulley Bracket

Part # 105270, 105465 Hardware Kit: HK-138

Kit Components:

· · · · ·	
Qty.	Part Description
1	Pulley Bracket
2	Nylon Spacer
1	. Nylon Bushing
1	. KFI Pulley
1	. 3/8"-16 X 1 1/2" Carriage Bolt
1	. 3/8"-16 Nylock Flange Nut
2	. 3/8"-16 X 3/4" Bolt
2	. 3/8" Lock Washer
2	. 3/8"-16 Jam Nut
2	. 3/8" SAE Washer

INSTALLATION INSTRUCTIONS:

1. Place cable over pulley and decide if upper (A), lower (B) or forward (C) position is best for your winch.

Note: Keep in mind that your cable needs to clear your fairlead bracket.

- 2. Install Nylon Spacers (D) and Nylon Bushing (E) to Pulley as shown in Figure 1.
- 3. Place cable over pulley and install to Pulley Bracket using the 1 1/2" Carriage Bolt and Flange Nut as shown in Figure 1.
- Loosely install 3/8" bolt, washer, lock washer and nut (F) through fair-lead bracket and pulley bracket as shown in Figure 1&3. Slots have been cut into the brackets to adjust for clearance of plastic on the machine.

Note: You may also need to use the forward position (C) to clear the plastic.


5. Once desired position is found tighten down all nuts.


Note: Make sure the cable is as close to 90 degrees from the ground as you can get it. Most plows come with 3 or more hook points for winches that are offset from the center of the machine.








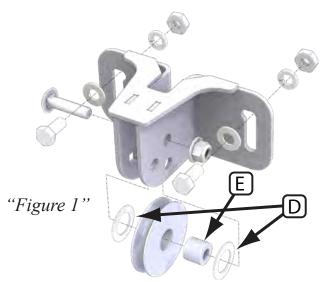

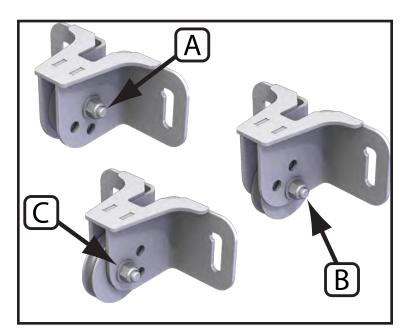

"Figure 2" Pulley Position

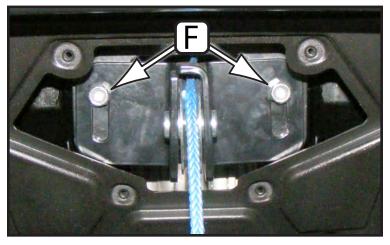

"Figure 3" Pulley Bracket Install