



WP-A6 Chroma Grille

To remove:

Unscrew the 4 speaker mounting screws. Gently lift the top 2 points of the grille star until the top center tab releases. Then gently lift the 2 bottom star points until the remaining 3 tabs are released.

To install:

Make sure to match up the inside-bottom peg on the Chroma Grille star with the peg hole on the bottom right hand side of the speaker grille (see illustration). Press down on the center of the star until the 4 tabs lock into place. Reinstall the mounting screws into the speaker.

