




MOTORCYCLE ARMED DISC-LOCK BATTERY REPLACEMENT

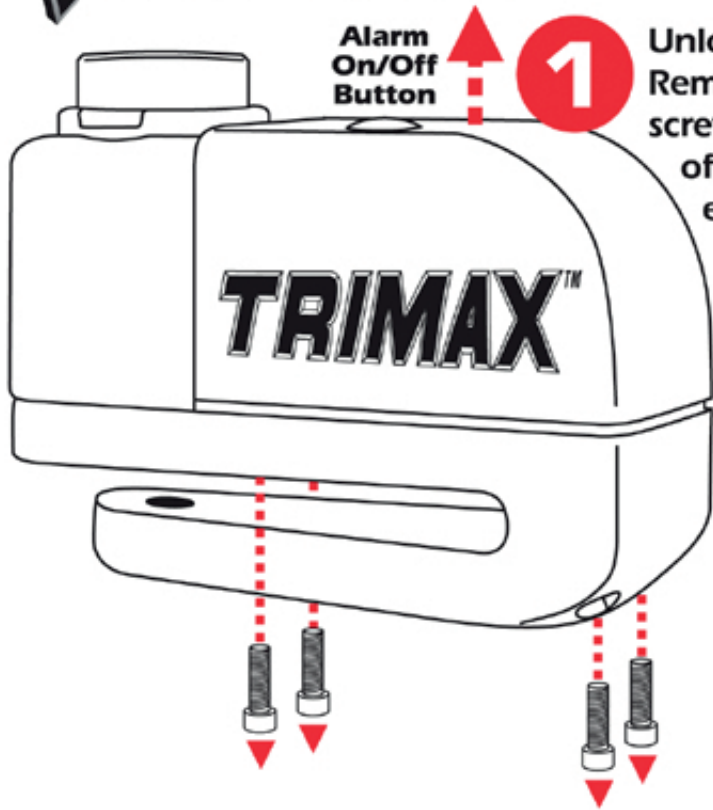

Alarm
On/Off
Button


1

Unlock alarm disc-lock. Remove 4 hex head screws from bottom of lock body using enclosed wrench and lift off vinyl covering.



3

Replace batteries with 6-AG13 button batteries & reinsert into lock body.

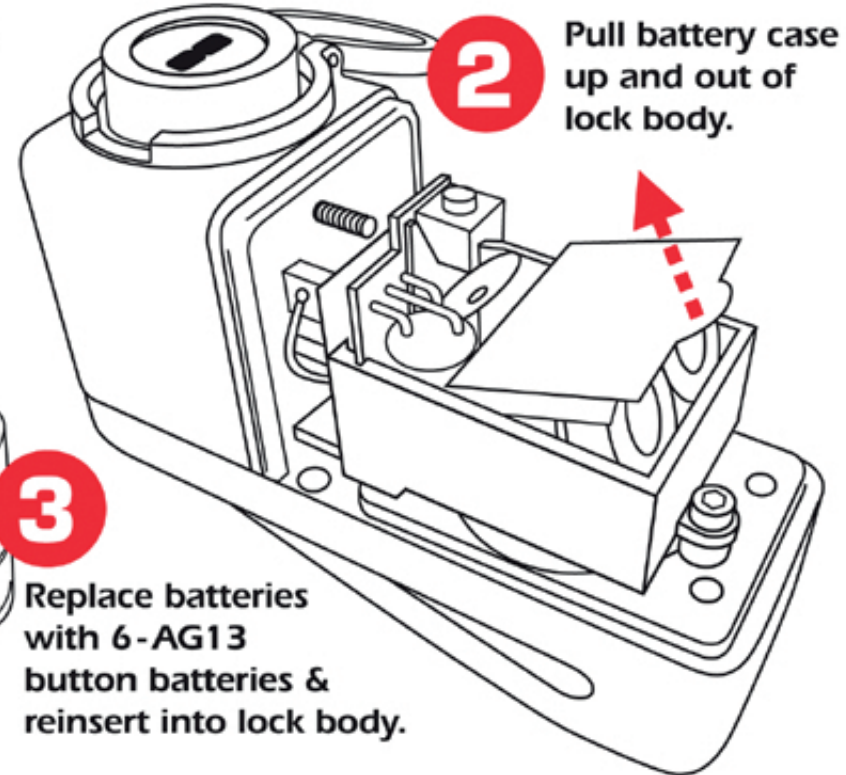

2

Pull battery case up and out of lock body.

▶ Disc Lock can be used with or without the alarm. Arm lock by pushing down lock head and pressing the button next to it.

MODEL #
TAL7PB

NOTE: BE SURE TO RECORD YOUR KEY NUMBER FOR REPLACEMENT IF LOST. LUBRICATE LOCK PERIODICALLY.

TRIMAX™ IS A DIVISION OF: **WYERS™**
Products Group, Inc.