




## Wireless Reprogramming Instructions

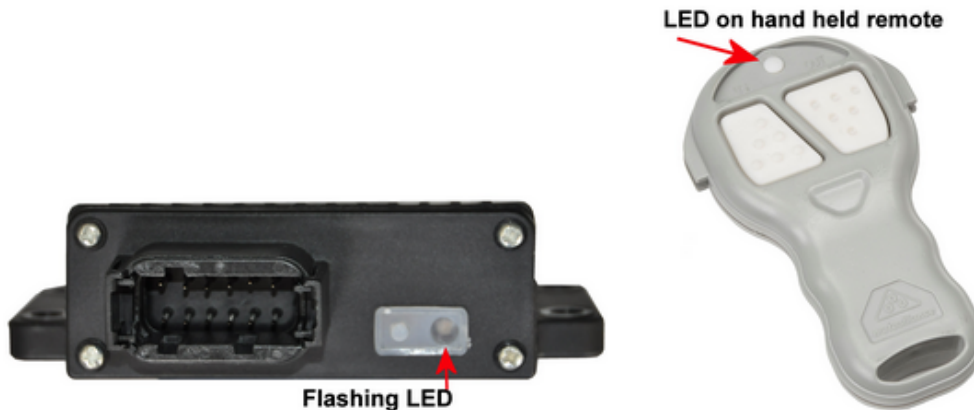

### Please Note:

The LED on the wireless receiver box will flash red and green during the reprogramming process.  
The LED on the hand held remote will NOT flash but may light up.

1. Press and hold the white button on the receiver box.
  - the LED will illuminate red temporarily, will switch to green, and then will turn off
2. Release the white button.
3. Within 1 second, press and hold the "IN" button on the hand held remote.
  - The green light will flash several times
4. When the green light stops flashing, release the "IN" button.
5. Press the "OUT" button on the hand held remote.
  - The LED will flash green again.
6. When the green light stops flashing, release the "OUT" button.
7. The LED will flash one more time after you stop pushing the "OUT" button.
8. After the last flash, programming of the remote will be complete.