




Intake kit Installation Instructions: 2008 Kawasaki Teryx 750cc Powersports

Kit P/N: 85-10036	Tools Required: 10mm socket or wrench 5/16" nut driver Flat head screwdriver Ratchet w/ extension	Parts list: 2 Air filters (Pro-GUARD 7™ 87-40011 & Pro Dry S™ 81-40011) 1 Housing 1 Coupler, reducer 4" x 3" 1 Clamp, #064 1 Clamp, #052 4 Screw, hex M6 x 1 x 12	6 Washer, flat M6 4 Washer, wavy M6 2 Nut, M6 1 7/16" trim seal @ 27.5"L 1 Pre-filter 1 Cleaning kit
Make: Kawasaki			
Model: Teryx	Year: 2008	Engine: 750cc	
NOTE: Jetting Required, 1 size up on needle, 1 size up on main jet over stock.			




Complete Stock Intake.

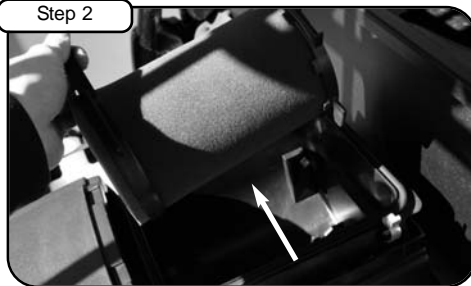


Remove air-box cover. Un-clip upper half of air-box with OE air filter and remove.



Remove engine cover. Remove plastic push clips using flat head screwdriver.

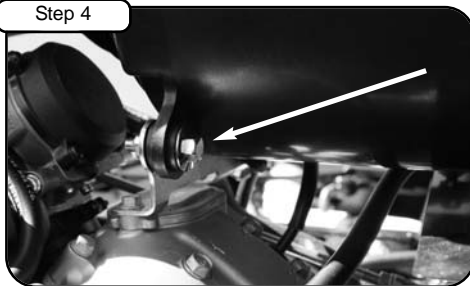

With 10mm socket or wrench loosen and remove the 4 bolts holding in OE air-box. (Be careful not to drop anything into the opening) Remove air-box.

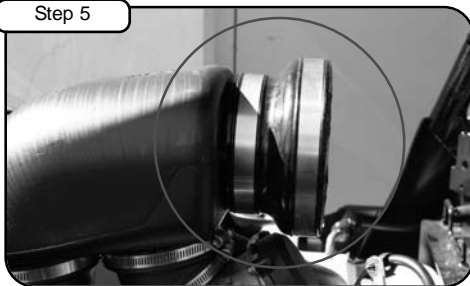

Install coupler with clamps to factory tube. Do not tighten.




Install 7/16" trim seal to housing.




To install housing into Teryx guide into coupler and position to bracket. Use screws, washer, and wavy washer to bracket. Tighten using 10mm socket or wrench.




Install screws with washer though tab. Using washer, wavy washer, and M6 nut place on other side of screw.

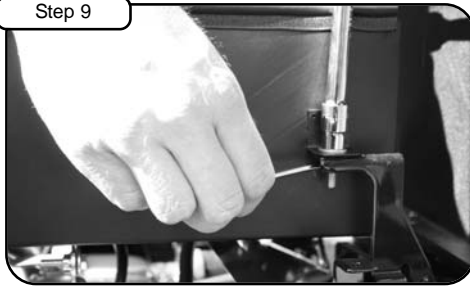

Tighten all screws with 10mm socket and wrench.

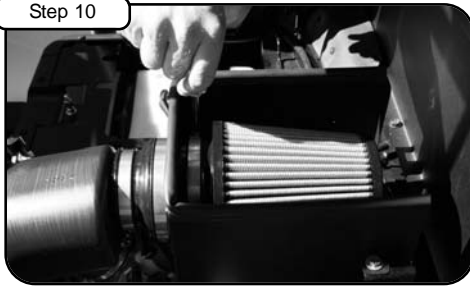


Install air filter to housing and tighten using 5/16" nut driver.

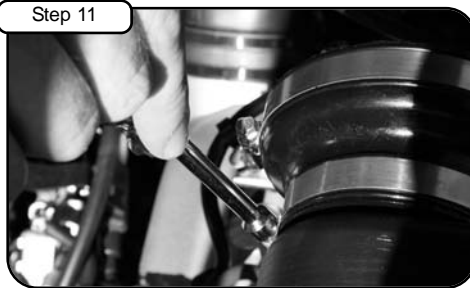

Tighten clamps on coupler using 5/16" nut driver.



Install pre-filter to air filter.

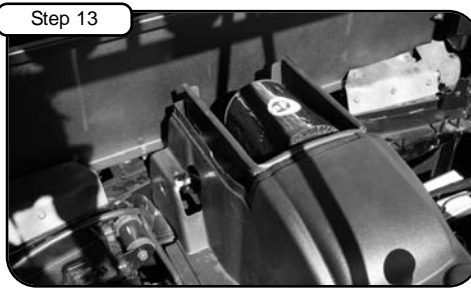

Re-install engine cover with push clips.



Install air box cover using push clips. Your installation is now complete. Please check all bolts and clamps periodically. Re-tighten if necessary. Thank you for choosing aFe!