



**baja designs**  
*The Scientists of Lighting*

**Polaris XP Turbo (16-18)  
Hood Mount Instructions  
44-7073**





**baja designs**  
The Scientists of Lighting

## **44-7073 Polaris XP Turbo (16-18) Hood Mount Instructions**

### **Tools Required**

T40 Torx bit and wrench

7/16 wrench

10mm socket and ratchet

1. Remove your Hood
2. Remove the 2 - T40 Torx screws and loosely mount the supplied L brackets as shown.



3. Bolt the S8 to the L brackets and tighten

4. Tighten the T40 screws






**baja designs**  
The Scientists of Lighting

5. Route wires around shroud and connect to harness supplied in kit



6. Use a 10mm socket and connect the negative and positive terminals of the wiring harness to the positive and negative terminals under the hood or directly to the battery underneath your seat. Do not connect the the harness leads to the far left terminal (this can only take a small amount of amps)

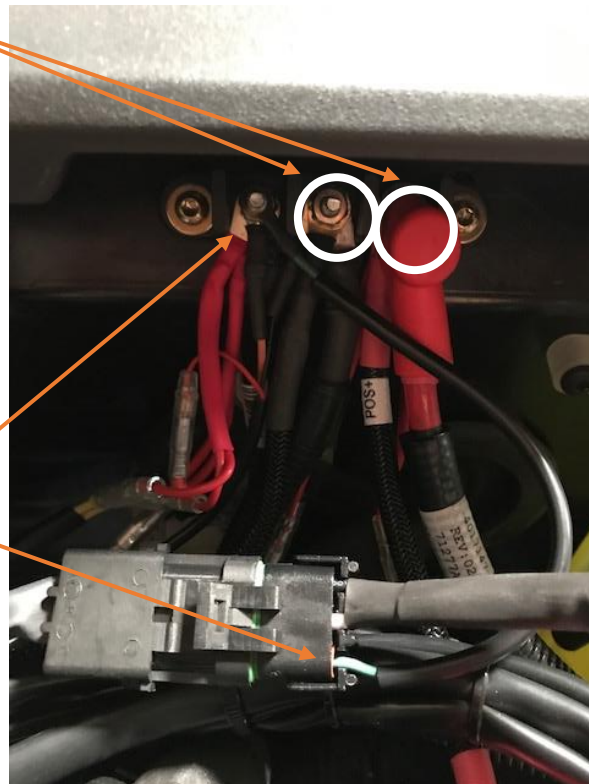

7. Insert the S8 backlight extension into the empty slot on the harness and attach that to the FAR LEFT terminal post to make the back light feature come on with ignition.
8. Route the switch through the rubber boot on the firewall and mount to the dash in the area of your choice.

Re-torque all the fasteners after 100 miles.  
Your install is now complete! Thank you for choosing Baja Designs.