



motoalliance



**DENALI
PLOWS**

**CF Moto UForce 600 Plow Mount
MA11763**

INSTALLATION INSTRUCTIONS


Thank you for purchasing a DENALI Plow Mount.
 You now own a premium, custom mount to allow you to use your plow with your ATV.
Please note the following instructions and heed all warnings.



- Your ATV and plow system can cause death or injury. Please use caution and common sense when operating your unit.
- Read your Plow Operator Manual, your Winch Operator Manual, and all warning labels before operating your ATV.
- Operate your ATV at a walking speed with the blade installed. Do not exceed 5mph (8km/h) even with the blade up.
- Do not operate the ATV on slopes greater than 10 degrees with the plow installed.
- Always lower the plow to the down position before leaving your ATV unattended.

SEVERE INJURY OR DEATH MAY RESULT IF YOU ARE NEGLIGENT.

PARTS LIST

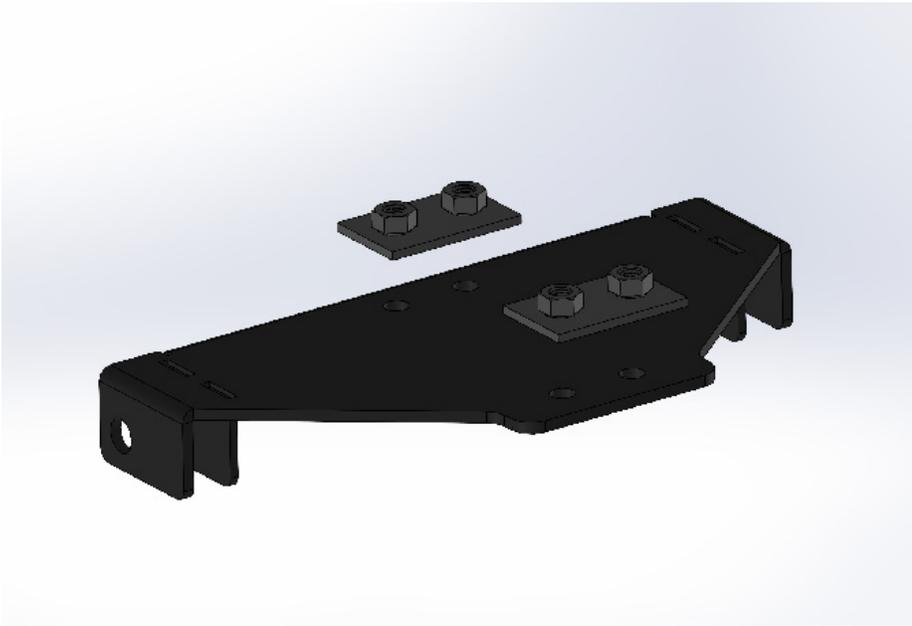


Please verify that all hardware and parts are included in your package.

Part#	Qty	Item Description
1	4	.5" x 1.75" bolt
2	4	.5" x 1.375" washer
3	4	.5" lock washer
4	1	MA11763
5	2	MA11763-3 (threaded bracket)

Figures Color Key |  Parts native to the machine  Parts native to DENALI Plow Mount

INSTALLATION INSTRUCTIONS

1. Remove 6 bolts holding skid plate, set all bolts and skid plate to the side.

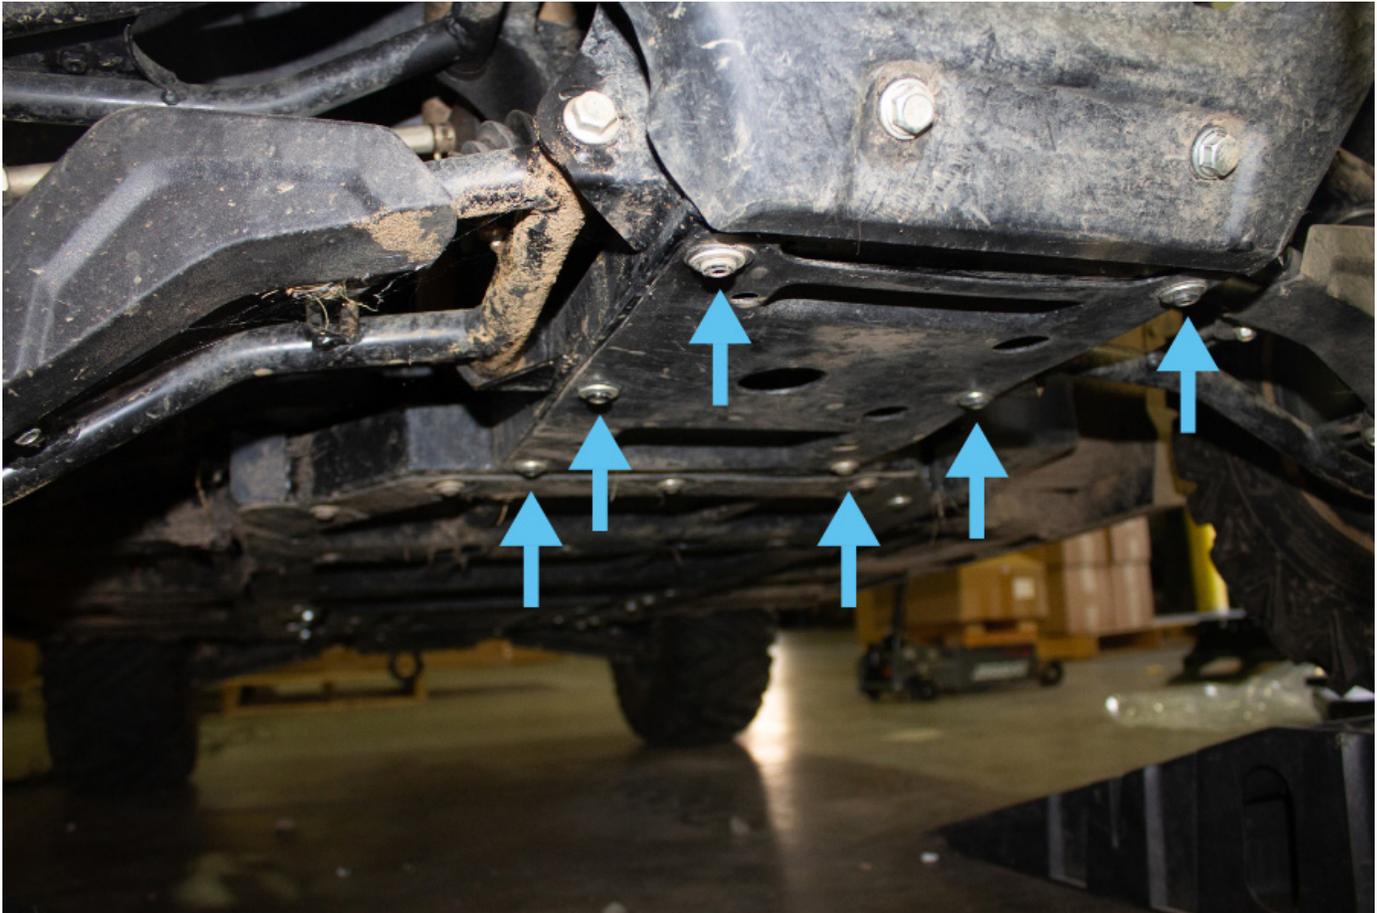

2. Place each threaded bracket behind the two holes in front and behind the differential.



3. Hold mount to frame and insert provided bolts to threaded brackets using a washer and lock washer on each bolt.

