
## Honda TRX 250X/TRX300ex Front Lowering Kit

Part Number 20-1004

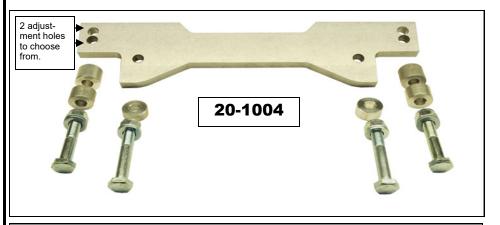

ATV pictures used, are not from a Honda but are typical of installation.

Remove upper shock mount bolt.

Front right side shock mount.


2) Remove the upper shock bolt and swing the shock away from mounting bracket.

3) Install the front lowering kit bracket and the bushings in the original shock mounting holes using the stock nut and bolt.

Note: Make sure you have received a complete kit. The picture (top left) shows all the parts and how they go together.

1) Raise the front end of the quad so the front wheels are off the around.

Facing the front, this is the right side.

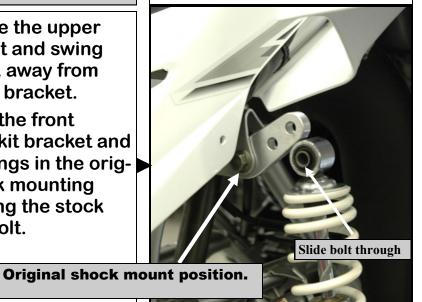

4) Position the lowering bracket against the front of the shock bracket and the bushings against the back. Do not tighten the bolts at this time.\* 5) Reinstall the shock in the desired mounting holes using supplied hardware, lower the bike, then tighten all bolts.

This is how your lowering kit should look when you're done! ▶ Bounce front up & down, check for binding!

Note: The front lowering kit is designed for flat track or ice racing.

