



CAUTION: INSTALLATION IS ALWAYS AT YOUR OWN RISK.

Improper assembly of this device may result in serious injury or even death, not to mention catastrophic damage to your machine. Before beginning, you must carefully read ALL INSTRUCTIONS, as well as attached DISCLAIMER INFORMATION. While installation is quite simple, it should ONLY be performed by those possessing solid mechanical abilities.


IF YOU ARE NOT MECHANICALLY INCLINED WE RECOMMEND YOU SEEK OUT EITHER A PROFESSIONAL MECHANIC OR YOUR DEALER TO INSTALL THE GOLDFINGER ON YOUR SNOWMOBILE!

TOOLS NEEDED

Other than the tools supplied with kit, you should only need: a pair of diagonal cutters (dikes) to trim excess cable, a pair of slip-joint pliers, and 1 tube Blue Loctite.

PARTS LIST

- A. GOLDFINGER lever and perch with safety pin installed (1)
- B. Stainless steel cable (1)
- C. Black cable housing (1)
- D. 1" clear nylon spacer (1)
- E. Allen wrenches (2, small and large)
- F. Plastic zip-ties (4)
- G. Flat washers (5)
- H. Nyloc nut (1)
- I. Barrel bolt (1)
- J. Ferrule end (2)
- K. Aluminum cable crimp cap (1)
- L. Short allen screw (1)
- M. Stainless steel adapter plate (1)
- N. Long allen screw (1)

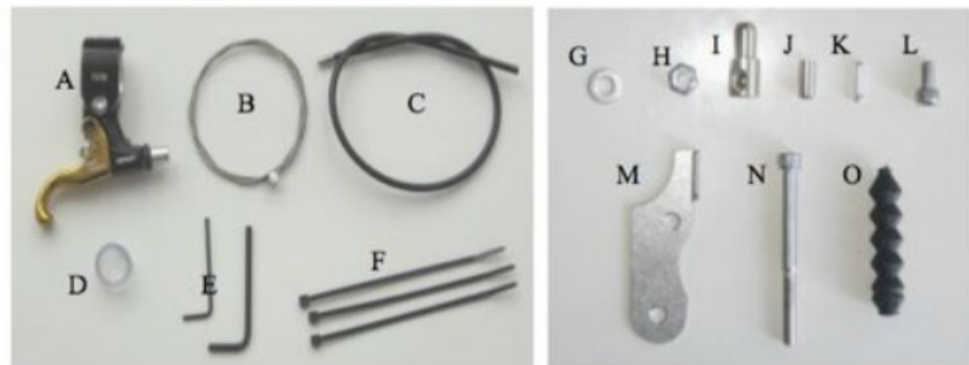

Find out more about handlebars & controls we have.