




Winch Mount		PART # 100555	
Kit Components:			
<u>Qty</u>	Part Description	<u>on</u>	
1	Winch Mount		$\sim$
4	5/16-18 x 1.00"	'HH Flanged Bolt	A
4	5/16" Nylock N	luts	
4	5/16" SAE Flat	Washers	Y J'
			10

## **INSTALLATION INSTRUCTIONS:**

- 1. Begin by removing the front plastic fascia (A) that protects the front bumper assembly. See "Figure 1"
- 2. Place mounting plate into location and attach using the supplied 5/16" hardware as shown in "Figure 2".
  - For Vinson use (B1) and (B3) bolt locations
  - For Eiger use (B1) and (B2) bolt locations
- 3. Assemble your winch and the Fairlead to the mounting plate using the hardware that was supplied with your winch.
- 4. Re-install plastic fascia that was removed.
- 5. Using the instructions provided with your winch, wire accordingly.

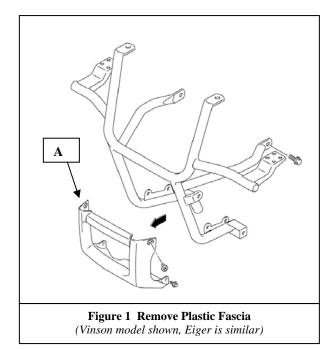

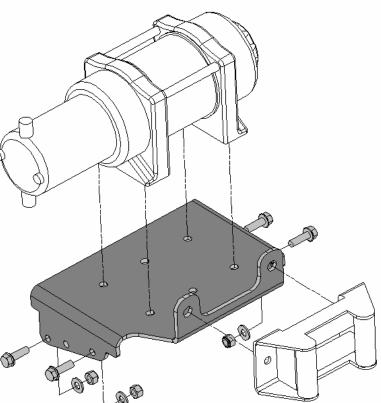

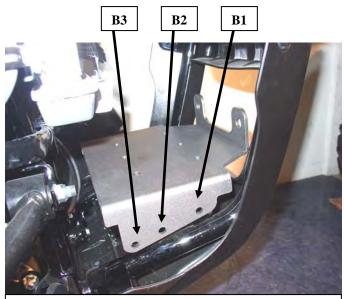

**Figure 2** Assemble Mounting Plate (Vinson model shown, Eiger is similar)

