# Arctic Cat 400-1000, Suzuki 400 King Quad/Eiger/Vinson

## **Plow Mount**

PART # 105035 Hardware Kit: HK-106

#### **Kit Components:**

# **<u>Qty.</u> <u>Part Description</u>**

1..... Plow Mount Plate

- 2..... 5/16-18 x 1-1/4" x 2" U-Bolt
- 2..... M10-1.25 x 30mm Hex Cap Screw
- 4..... 5/16-18" Hex Flanged Lock Nut
- 8..... 7/16" Flat Washer, SAE
- 2..... 7/16" Lock Washer

## **INSTALLATION INSTRUCTIONS:**


#### 1. Arctic Cat Only


Place the 2 u-bolts on machine frame as shown in Figure 2. Skip to step 3. Note: Some models may require holes to be cut (A) in the skid plate to allow clearance for the u-bolts. (See Figure 2)


#### 2. Suzuki Only


The King Quad, Eiger and Vinson uses the other sets of u-bolt holes (G) as shown in Figure 5. Use the best fit for your machine.

- 3. Remove front bolts (B) from foot rests (Figure 2).
- Install mount plate loosely to foot rest using included M10 bolts, 7/16" flat washer and 7/16" lock washer (Figure 3&4, C&D). Note: Use extra washers provided in hardware kit as spacers between the foot rest and mount plate if needed (Figure 3,E).
- 5. Insert u-bolts through slots in mount plate and install 5/16" flanged lock nuts (Figure 4,F or G).
- 6. Tighten down all nuts and bolts. (Make sure u-bolt ends are even.)
- 7. See ATV Plow Tube System instruction manual for tube attachment.

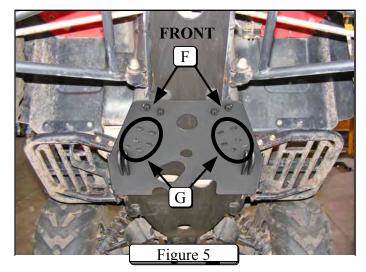

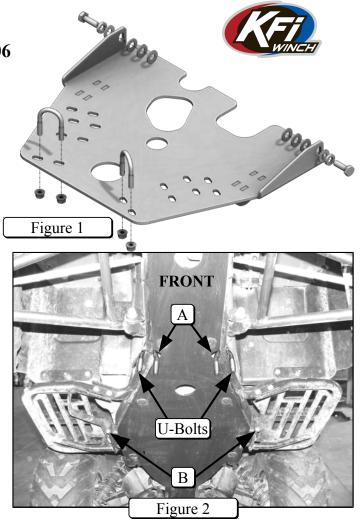

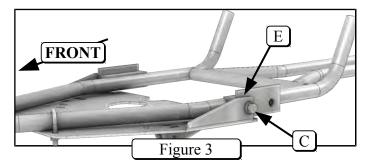

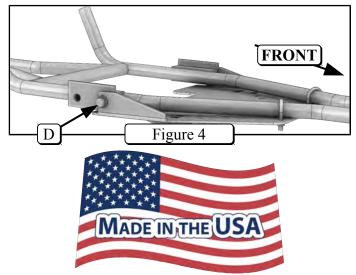

Discover other winches on our website.