

Kawasaki 650-750 Brute Force/Prairie Straight Axle Rear End

Plow Mount

PART # 105070
Hardware Kit: HK-112

Kit Components:

<u>Qty.</u>	<u>Part Description</u>
1.....	Plow Mount Plate
4.....	5/16"-18 x 1-3/8" x 2" U-Bolt
8.....	5/16-18 Hex Flange Lock Nut

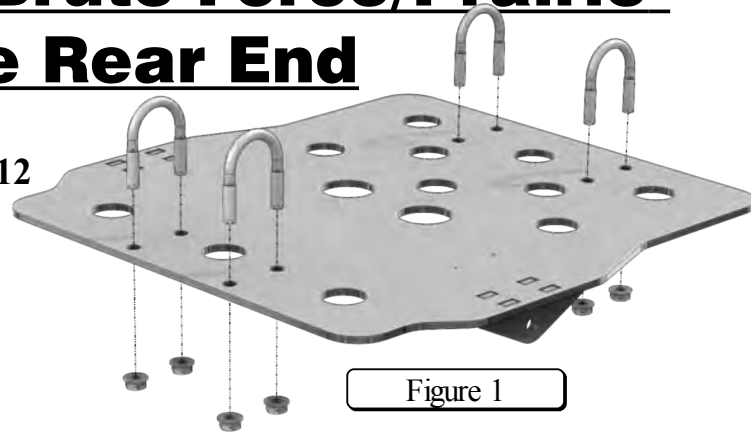


Figure 1

INSTALLATION INSTRUCTIONS:

1. Remove 4 bolts (A) holding the skid plate and remove skid plate. (Figure 2)

Note: If you prefer to leave your skid plate attached you may drill holes for u-bolts and continue to step 2.

2. Place u-bolts (B) on machine frame as shown in Figure 3.

3. Install mount plate loosely to frame using the u-bolts and 5/16" flanged lock nuts. (Figure 4,5)

4. Adjust plate so oil plug lines up with hole and plate is centered on machine.

5. Tighten down all nuts. (Make sure u-bolt ends are even.)

6. See ATV Plow Tube System instruction manual for tube attachment.

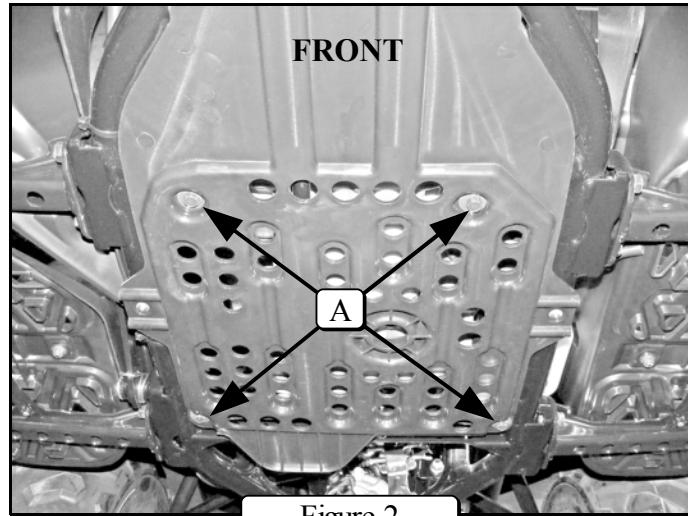


Figure 2

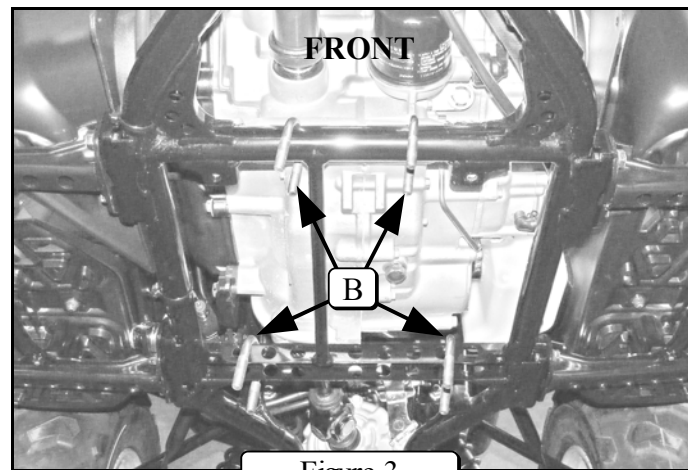


Figure 3

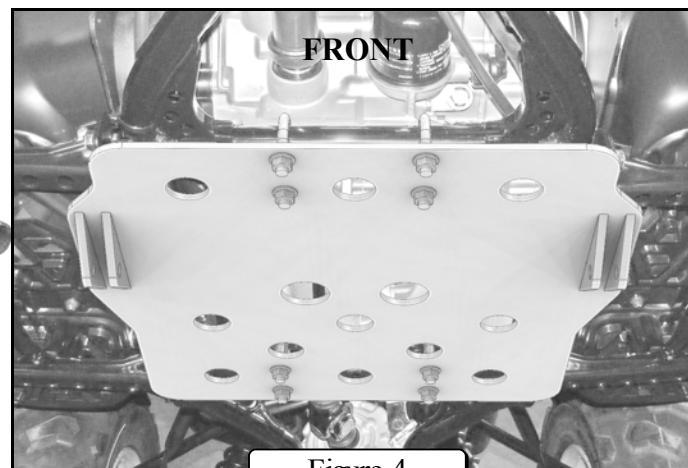


Figure 4

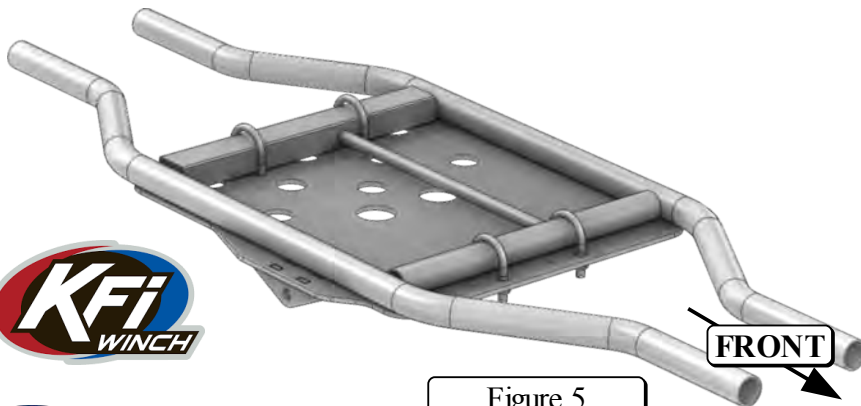


Figure 5



Discover other winches on our website.