

# POLARIS RANGER XP 900

Plow Mount

PART # 105475

Hardware Kit: HK-147



## Kit Components:


Qty.	Part Description
1.....	Plow Mount
2.....	7/16"-14 x 1" Flange Bolt
2.....	7/16"-14 Flange Nylock Nut




*"Figure 1"*

## INSTALLATION INSTRUCTIONS:

1. Remove lower bumper bolts and nuts (A) as shown in Figure 2.
2. Place mount plate up to machine and install 7/16" bolts and nuts (C) to location (B) as shown in Figures 2&3.
3. Reinstall lower bumper bolts and nuts (A) through plow mount and frame.
4. Tighten down all bolts.
5. See UTV Plow Tube System instruction manual for tube attachment.

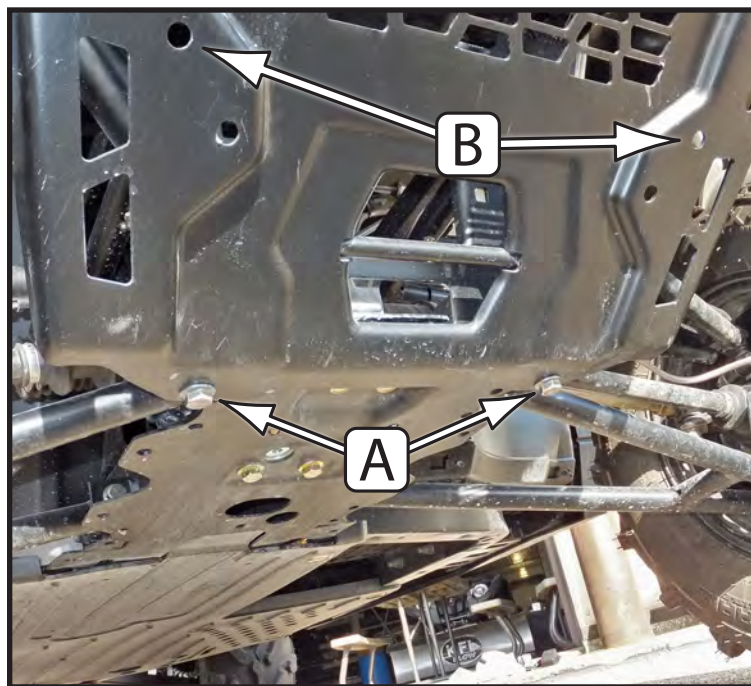

*"Figure 2" Front Bumper*

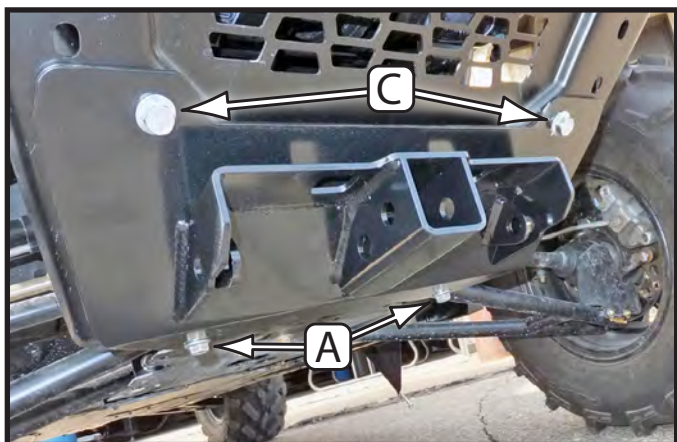

*"Figure 3" Mount Installed*



Discover other winches on our website.