



UNIVERSAL HELMET LOCK

4220

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION

This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Universal Helmet Lock Assembly — fits 7/8" to 1-1/4" round tube
- 2 Keys
- 2 Tamper-Proof Screws
- 1 Installation instructions

TOOLS SUGGESTED:

Flat blade screwdriver

NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.


STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Allow the engine and exhaust system to cool.

STEP 2 Test fit the helmet lock on the motorcycle to ensure that the helmet will not damage or interfere with any other components on your motorcycle.

Do not install the tamper-proof screws at this time.

NOTE: It is very important to perform the "test-fit" due to the extreme difficulty in removing the tamper-proof screws after they are tightened.

STEP 3 Insert the tamper-proof screws through the front side of the helmet lock as shown in **PIC.1**.

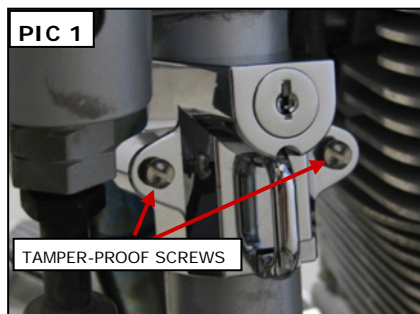

STEP 4 Tighten the screws evenly and ensure that the helmet lock is properly clamped onto the tube.

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

WARNING

AVOID LOSS OF CONTROL, DAMAGE AND SERIOUS INJURY OR DEATH. DO NOT OPERATE THE MOTORCYCLE WITH THE HELMET LOCKED INTO THE UNIVERSAL HELMET LOCK.

WARNING

ENSURE THAT THIS PRODUCT DOES NOT INTERFERE WITH THE PROPER AND SAFE OPERATION OF THE MOTORCYCLE. FAILURE TO INSTALL THIS PRODUCT COULD LEAD TO LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

NOTICE

Ensure that the installation of this product does not interfere with any painted, moving, or hot surfaces that could be damaged or cause damage to a helmet. It is the end user's responsibility to determine the best mounting location.

NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

Ride On!