


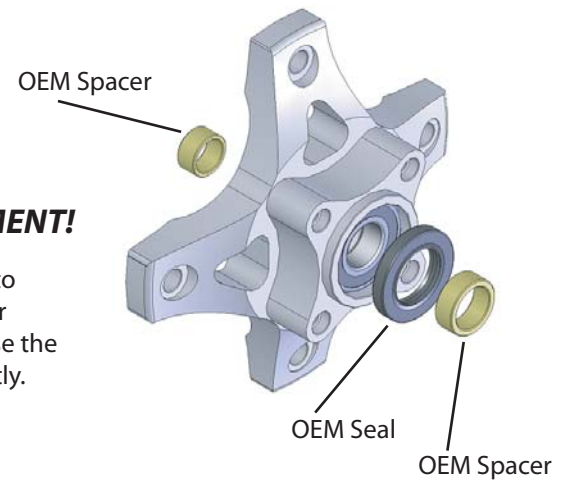


YOU MUST USE THE OEM SEALS AND SPACERS FOR PROPER FITMENT!

Congratulations on purchasing your new LSR Microlite front wheel hubs. You need to transfer the outer seals and spacers from your OEM hubs to the new hubs for proper fitment. Since the new hub has a sealed cover on the outside, its not necessary to use the smaller outer seal, but you still need to use the spacer so the nut can tighten correctly.



Micro-Lite Front Hub Upgrade

Congratulations on purchasing your new front hub upgrade kit. The kit adds more strength, longer life, and great looks to your LSR Billet Front Wheel Hubs. Below is a diagram for the installation. The only thing that needs to be done is to have the small outer bearing pressed in, and then don't reuse your stock outer spacer and seal.

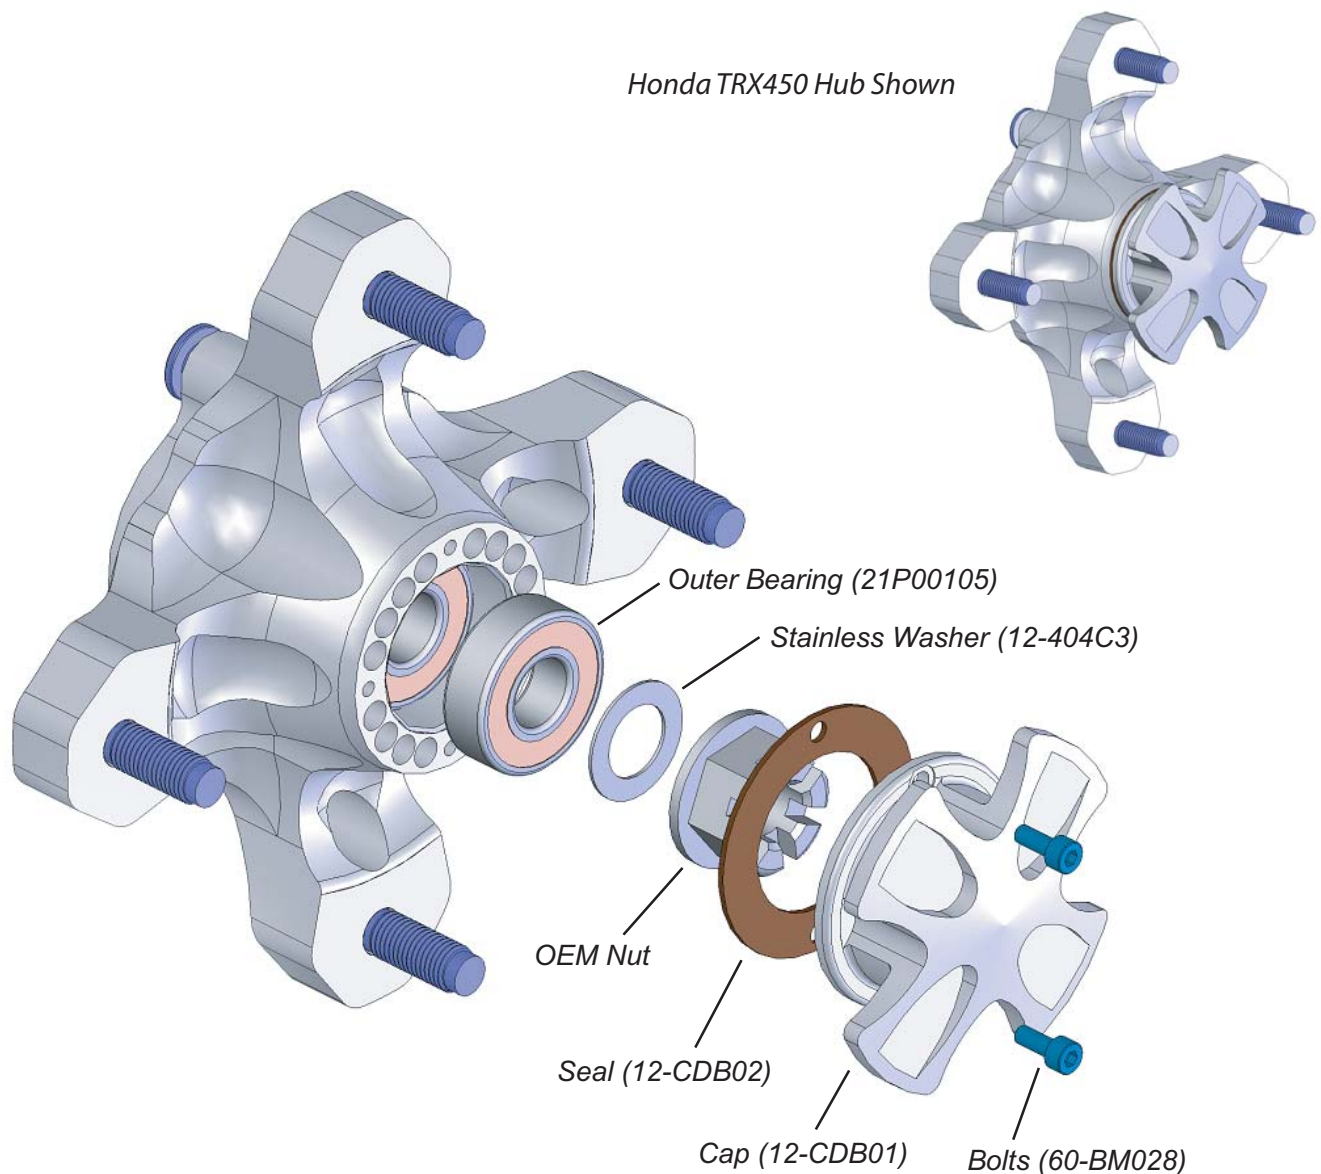

Discover various powersports parts and accessories in our online store.