


L U M E N

G10 LED Conversion Kit

INSTALLATION INSTRUCTIONS

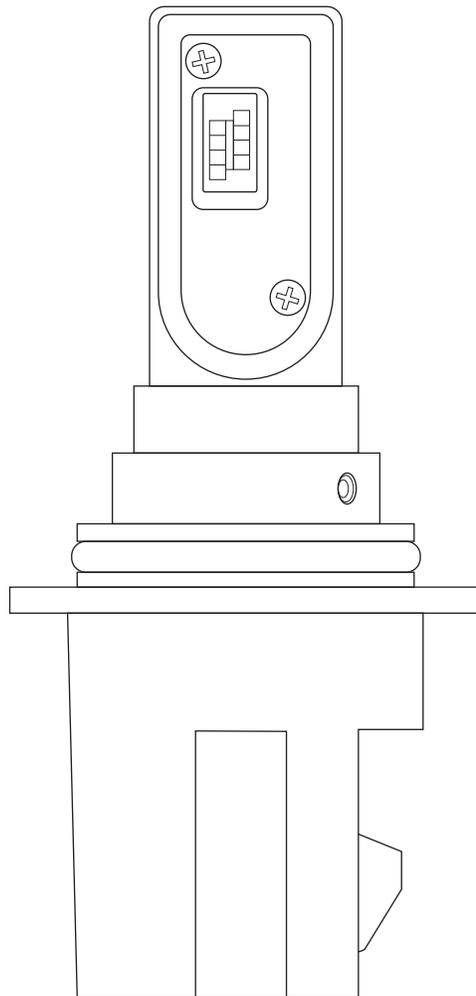

880XHLC-G10, 9004HLC-G10, 9005HLC-G10, 9006HLC-G10, 9007HLC-G10, 9012HLC-G10
GOLFHLC-G10, H11XHLC-G10, H13XHLC-G10, H15XHLC-G10, H1XXHLC-G10, H3XXHLC-G10
H4XXHLC-G10, H7XXHLC-G10, H8XHLC-G10, H9XXHLC-G10



 **In the box:**

- Two G10 LED conversion bulbs
- Allen key
- Adjustment instructions




STEP 1. Locate your headlamp.


STEP 2. If there is a cover on the back of the headlamp, remove the cover.



STEP 3. Unplug the bulb in the headlamp, remove the bulb.



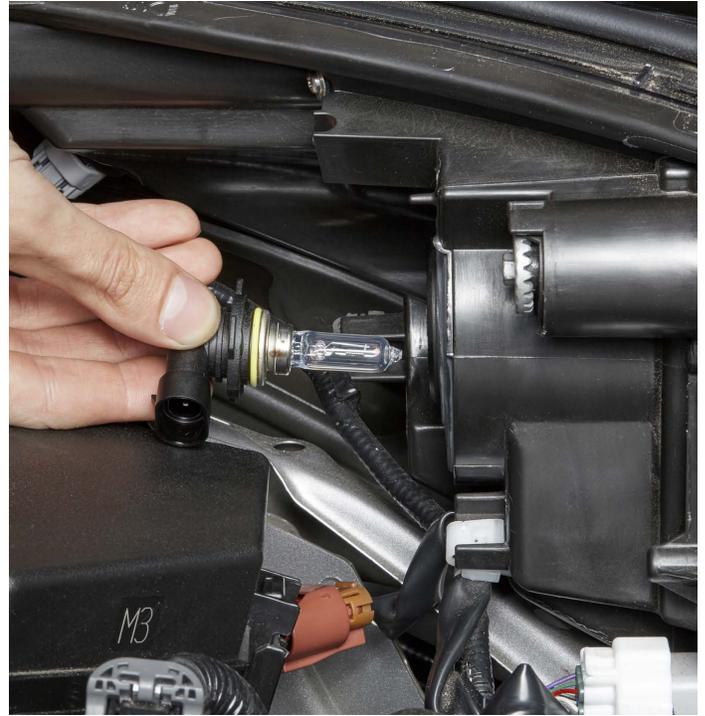

STEP 4. Place the new G10 LED conversion bulb in the socket and make sure it is secure.

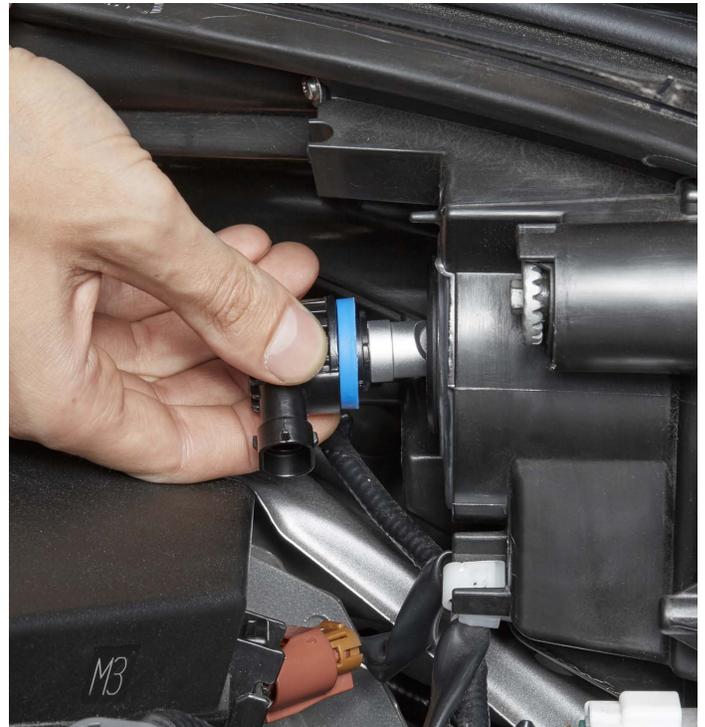

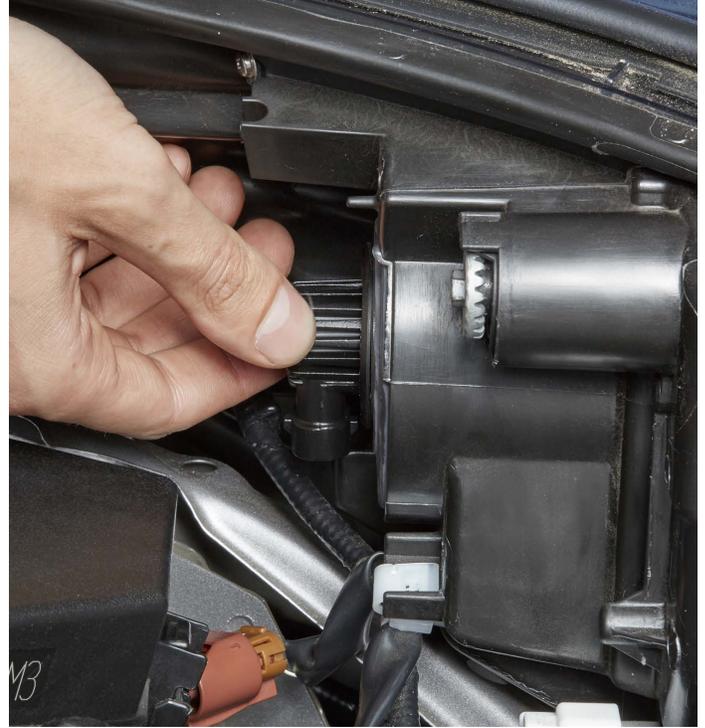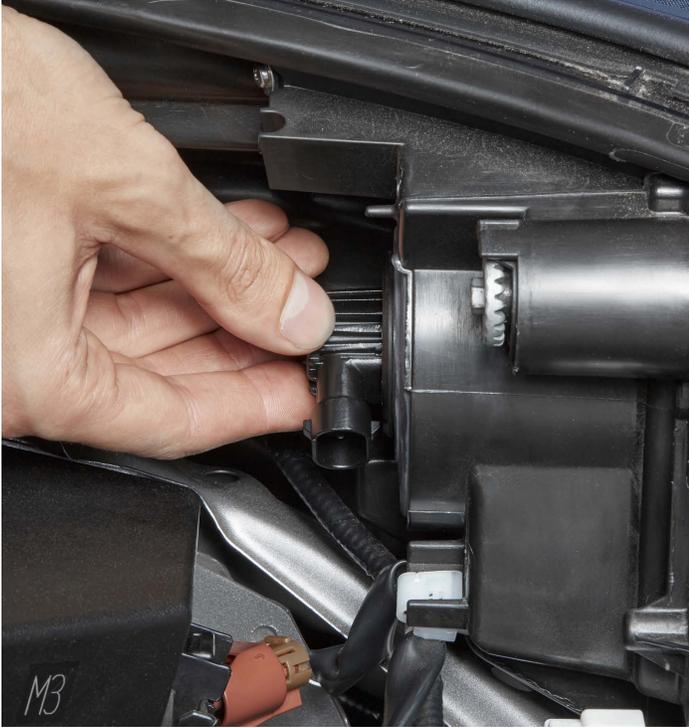


STEP 5. While looking into the headlamp from the front of the vehicle, ensure the bulb is in the correct orientation according to the adjustment instructions included in the box.

STEP 6. If the front of the bulb is not in the correct position, you will need to remove the bulb and adjust it according to the adjustment instructions.



STEP 7. Once the bulb is properly situated, plug the bulb into the headlight harness. Do not re-install OEM dust covers, to allow for adequate cooling of conversion bulbs.

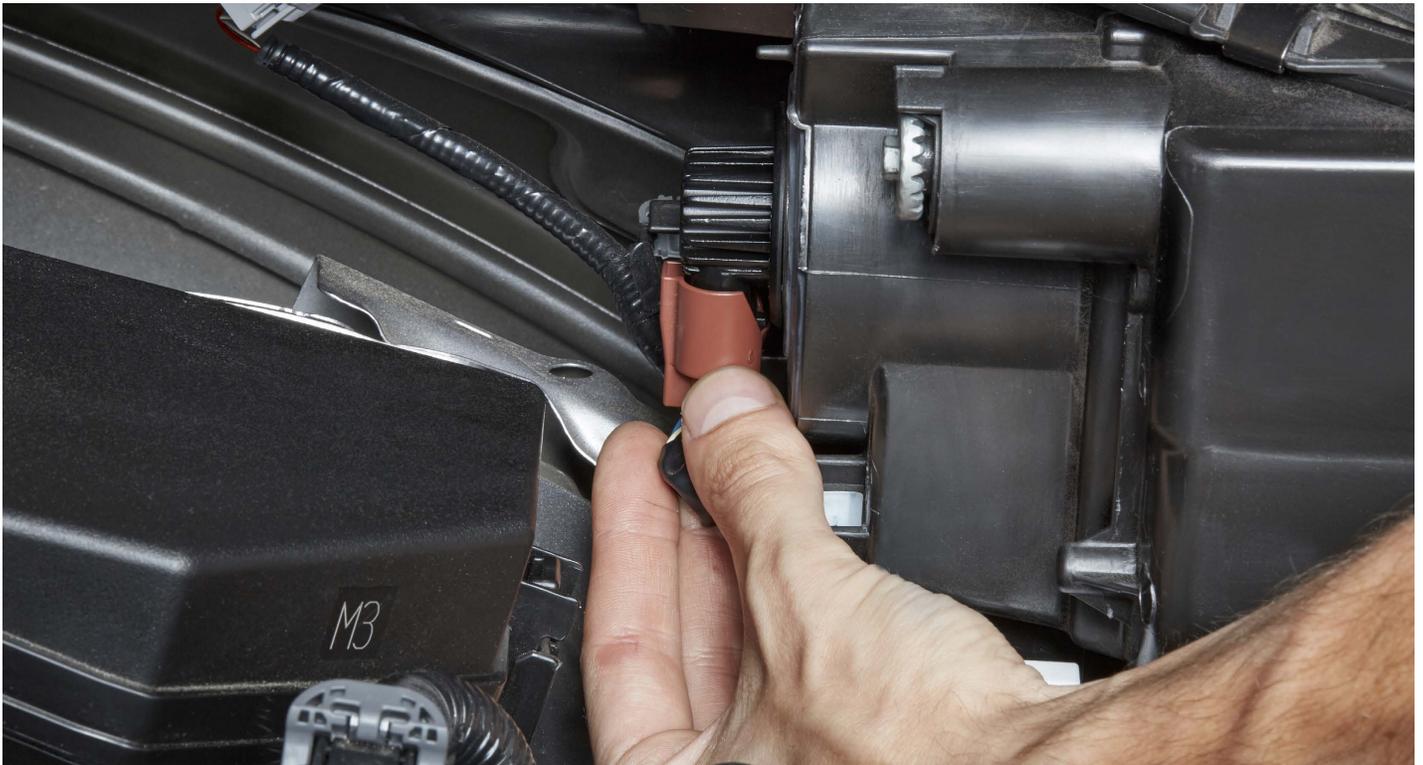

STEP 8. Turn on your headlights and ensure proper operation of bulb on low beam and high beam if applicable.



Check out other lights offered in our online store.