


## BEFORE YOU BEGIN


1. Read these instructions and check to be sure all parts and tools are accounted for.
2. Please retain these installation instructions for future reference and parts ordering information

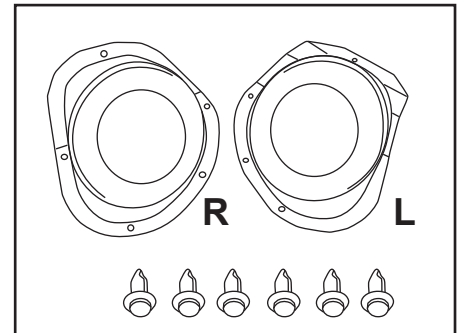

## IMPORTANT

1. Our product is a unique design for your vehicle.
2. Please read the installation instructions carefully before you start.
3. If the vehicle is clean and free of other debris, it will be easy to install.
4. For your safety and to ensure a satisfactory installation, please complete all the installation steps in the order shown below

## PRODUCT INFORMATION:

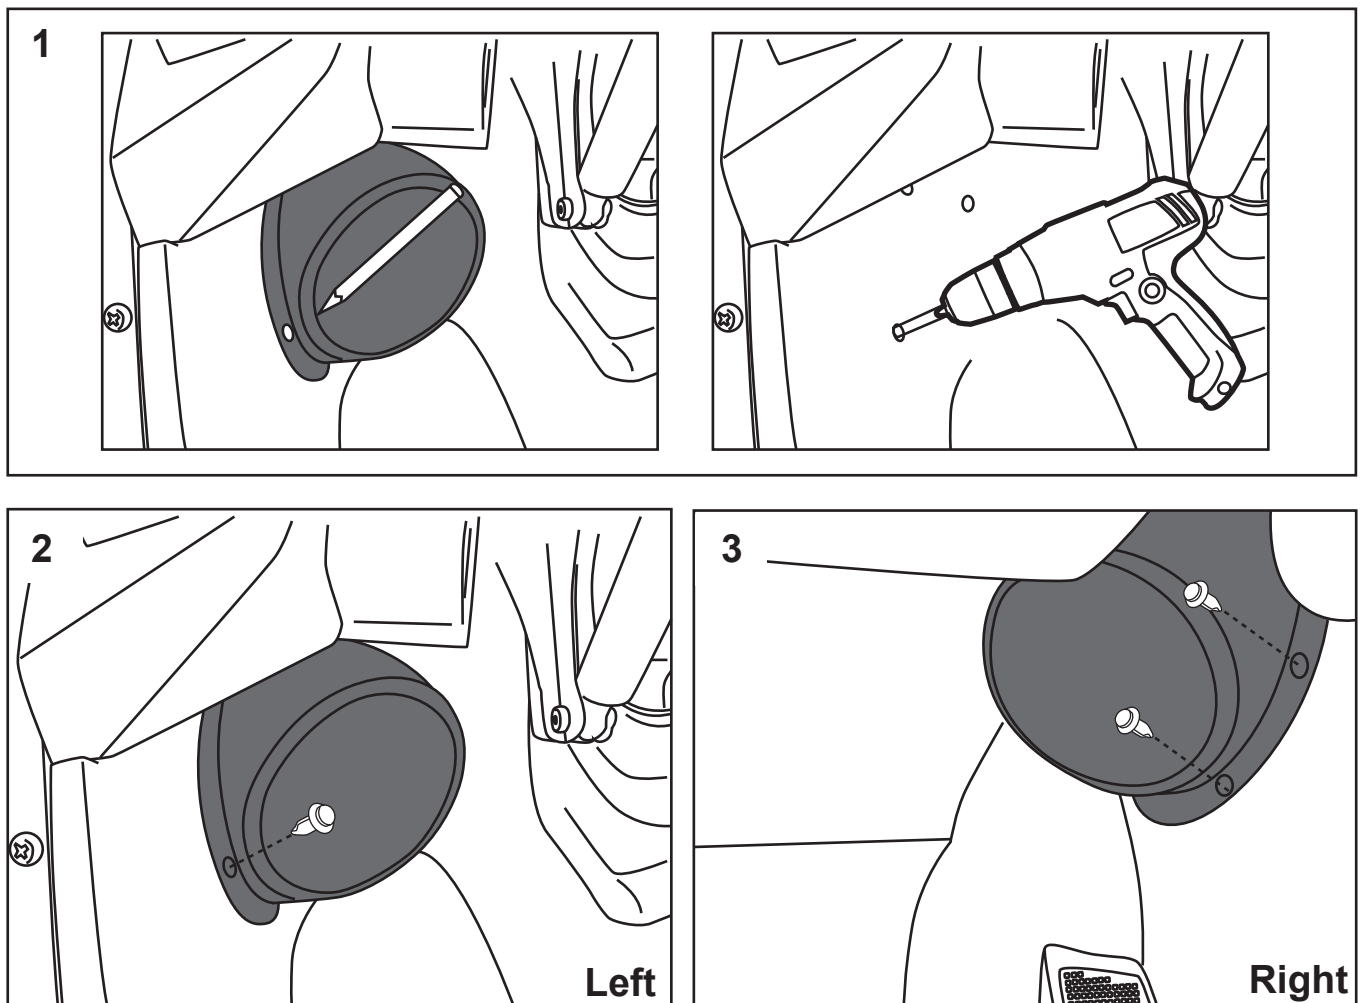

Step 1: Align the pods in the kick panel position on the General. Pods are formed to sit flush with kick panel. Mark the hole position of each hole, drill a 9/32nd hole.

Step 2: Hold pod and align the holes, insert fender clips.

Step 3: Refer to step 2 to install the other side audio stand.