

### BEFORE YOU BEGIN


1. Read these instructions and check to be sure all parts and tools are accounted for.
2. Please retain these installation instructions for future reference and parts ordering information

### IMPORTANT

1. This product fits 2014-2020 Polaris RZR 900/1000.
2. Please read the installation instructions carefully before you start.
3. If the vehicle is clean and free of other debris, it will be easy to install.
4. For your safety and to ensure a satisfactory installation, please complete all the installation steps in the order shown below

### PRODUCT INFORMATION:

REF	QTY	PART DESCRIPTION
1	1	Speaker Assembly, LH
2	1	Speaker Assembly, RH
3	2	Rivet, Push Pin - 0.354X 0.9

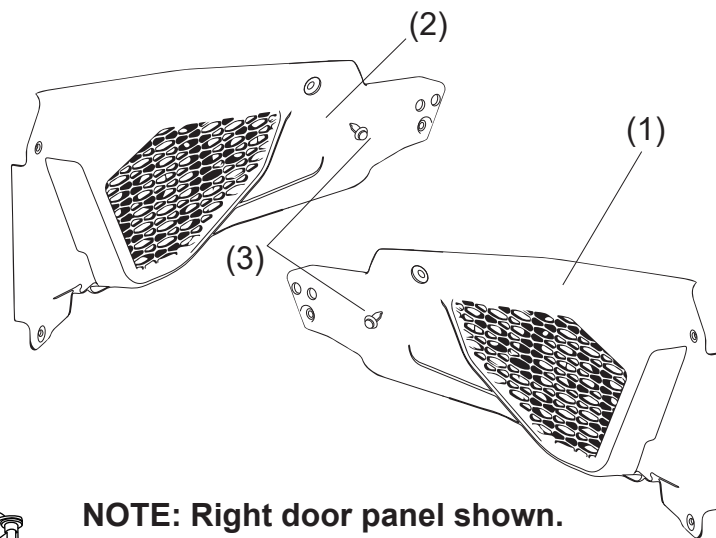

### INSTALLATION TIPS:

#### NOTE: Right door panel shown.

**1.** Remove four screws A from inner door frame as shown. Retain screws. NOTE : Do not remove screws B or C; door pod assembly (1) (2) is installed on top of screw B, C, and cutouts are provided for screws E.

**2.** Install speaker assembly (1) (2) to inner door frame using four retained screws A and one push pin rivet (3) as shown. Route speaker wires through channel D in speaker housing, through interior of door frame U-channel E, then out below lower hinge. Ensure wire routing prevents pinching or contact with sharp edges.

**3.** With the panel face down on a soft surface install your aftermarket speaker. Make sure the mounting hardware from your aftermarket speaker will not puncture through the front panel. If you have a tweeter a bracket may need to be created.

**4.** Repeat Steps 1 and 2 for opposite speaker.

