



ORACLE LIGHTING


HIGH POWERED HEADLIGHTS

PART #5769

INSTALLATION GUIDE



TOOLS NEEDED:
PANEL TOOL
T15 TORX BIT
WIRE CRIMPS
T-TAPS

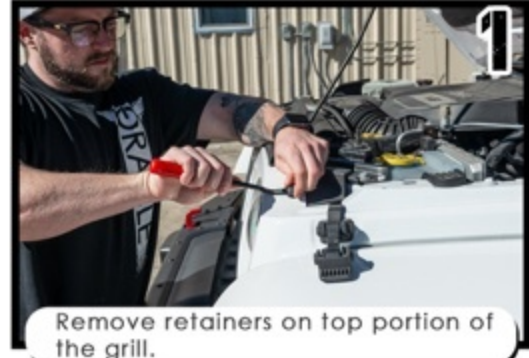

1
Remove retainers on top portion of the grille.



2
Gently pull on grille until the grill unclips from the chassis.



3
Twist and remove the parking light bulbs, and set grille to the side.



4
Loosen the (4) T-15 Torx Bolts to remove the headlight.



5
Unplug the factory harness from the OEM headlight.



6
Be sure to separate the OEM Trim Rings. These will be used later.



7
Plug in the included adapters to the factory harness.



8
Plug in new LED Headlight into supplied adapters.



ORACLE LIGHTING

HIGH POWERED HEADLIGHTS

PART #5769

INSTALLATION GUIDE





Install new LED Headlight into factory housing on chassis.




Re-install OEM Trim Ring and the (4) T-15 Torx screws.

11 Repeat steps 3 to 10 on the Driver's side of the vehicle.

12 Connect T-Taps to Positive & Negative wires on the Parking Light Wiring Harness. (See Diagram Below)

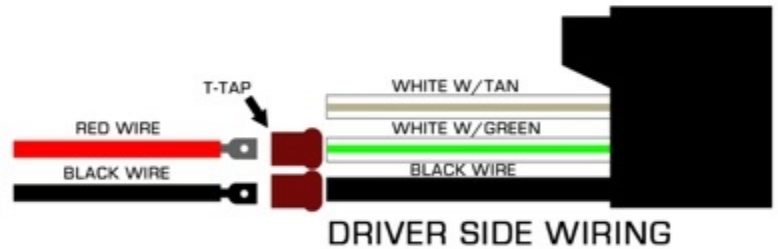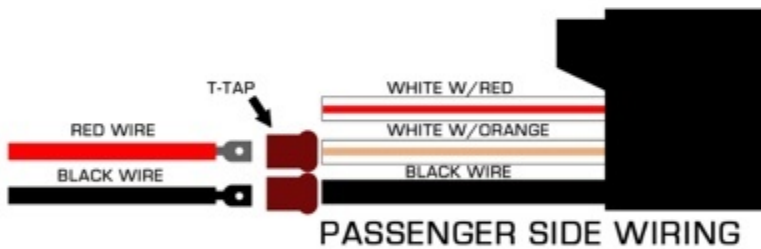

Re-install Parking Light Bulbs into grill, and re-install grill.

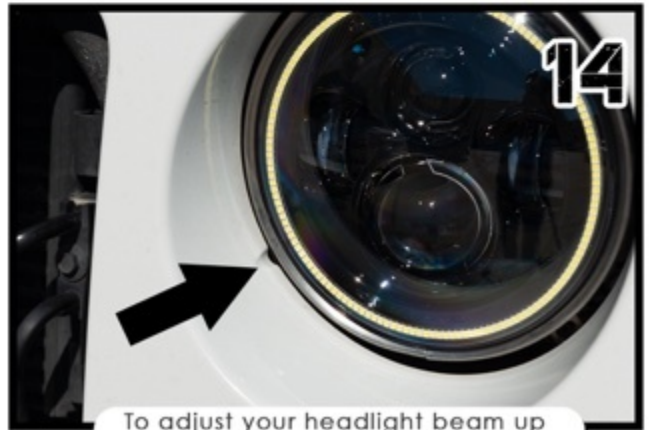

To adjust your headlight beam up or down, use T-15 Torx shown here.