

Star/Trail Star Handguard Mirror



Installation Instructions for Part No. 34289

Hardware Included:

- 2 – Short button head screws
- 2 – Long button head screws
- 2 – Lock nuts
- 2 – Springs
- 2 – 6mm washers (not used)
- 2 – Square Nuts

Tools Required:

- 4mm hex wrench
- 1/4" drill bit
- Drill
- Drill punch
- Marker



PLEASE READ ALL INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

NOTE: These instructions will explain how to install one side.

Then repeat the instructions for the other side.


STEP 1: Hold the right mirror onto the right handguard as show in **Photo 1**. Mark the hole with a marker. Make sure the mirror is situated over the front of the handguard. Proper placement of the hole is crucial for the mirror to work properly. Mark the hole using a marker then center punch the location and then using a 1/4" drill bit drill the hole.

STEP 2: For a FIXED mirror: Attach the mirror to the handguard by inserting the short button head screw through the mirror then through the drilled hole into handguard. Use the square nut (which will mount into the recess of the handguard) to secure the mirror.

For a FOLDING mirror: Attach the mirror to the handguard by inserting the long button head screw through the mirror then through the drilled hole into handguard. Slide the spring onto the button head screw on the backside of the handguard. Secure using the lock nut.

STEP 3: Once mounted, adjust mirrors by rotating them to the desired position.

NOTE: This accessory will work with or without the Star Series extensions. The folding mirror option will not work with the Hand Wrap accessory.

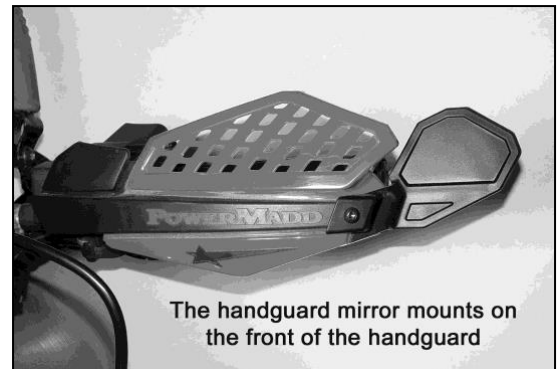

The handguard mirror mounts on the front of the handguard