



RZR 1000 Roof Installation


Components:

- 1 Roof
 - 6 1/4-20x3/4" Bolts
 - 6 1/4" Fender Washers
 - 6 1/4-20 Clip Nuts
- Note:** There are 2 extra Clip nuts, bolts, and washers.

1. Locate and remove the 4 bolts holding on the factory Sun Visor.



2. Remove the factory Clip nuts from the Rollcage and remove the Sun Visor.
3. Install supplied Clip nuts into the rear of the Rollcage.

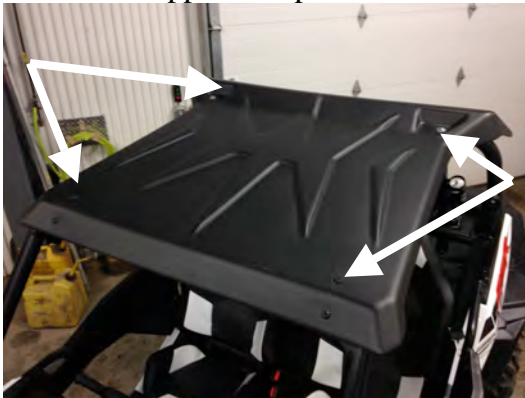

4. Set the roof on the UTV and install two 1/4-20 X 3/4" bolts and washers in the rear holes.
5. Locate and drill the front holes. Install the Clip nuts and bolts.