



POLARIS® AZA® XP1000

2014-2016 POLARIS® AZA® XP1000

**A-PILLAR MOUNT
INSTALLATION INSTRUCTIONS
FITS (2) D-SERIES®**

*Lights sold separately



KIT INCLUDES

- (1) Mount #46526
- (2) Windshield

- (4) 10mm x 50mm Grade 10.9 Bolts

IMPORTANT

Thank you for purchasing Rigid Industries® products for your Polaris®. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with the installation. **It is strongly recommended that this product be installed by a professional.**

STEP 1

Remove and discard (2) 15mm screws.
See Figure 1.

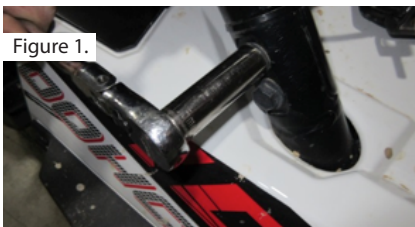


Figure 1.

STEP 2

Install Rigid Industries mount and using
(2) 10mm x 50mm bolts. See Figure 2.



Figure 2.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

STEP 3

Install Rigid Industries light using hardware provided with the light. See Figure 3.



Figure 3.

STEP 4

Repeat Steps 1 – 3 for remaining side.

Wire your lights according to the instructions included with the light. Take care to avoid any heat sources and sharp or abrasive surfaces.

Rigid Industries provides the best in off-road lights equipment.