

## Installation & Operations Manual for Rear View Mirror

### Round Tube Clamp Mounting:

**Halo Rear View Mirror**  
**18053- Defender Clamp**  
**18055- 1.625" Clamp**  
**18056- 1.75" Clamp**  
**18057 - 2" Clamp**  
**18058 - Pro-Fit Clamp**  
**18059 - X3 Clamp**

#### Contents:

Mirror



Round Tube Roll cage clamp




Mirror Arm

M8x20mm Button head Bolt (1)

M8x25mm Socket head Bolt (1)

**Installation:** For vehicles with round front cross tubes.

**1.**

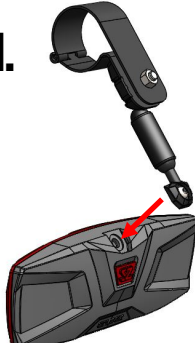

Screw Mirror Arm into Mirror using M8x20mm button head bolt.

**2.**

The round tube roll cage clamp mounts to the middle of the upper front cross tube.



**3.**

Mounting Location



Place round roll cage clamp around front cross tube.

**4.**



Line up the mirror with arm attached and install using M8 x 25mm socket head bolt. Adjust mirror as necessary.

## Installation & Operations Manual for Rear View Mirror

### Pro-Fit/Defender Clamp Mounting:

#### Contents:

Mirror



Pro-Fit Clamp Bracket A




Defender Clamp Bracket A



Clamp Bracket B



Mirror Arm




M8x20mm Button head Bolt (1)



M8x25mm Socket head Bolt (1)

**Installation:** Full & Mid-Sized Rangers with Pro-Fit Roll Cage Can Am Defender with Profiled Roll Cage.


**1.**

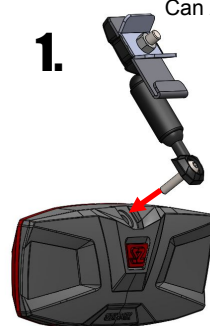

Screw Mirror Arm into Mirror using M8x20mm button head bolt.


**2.**

Mounting Location

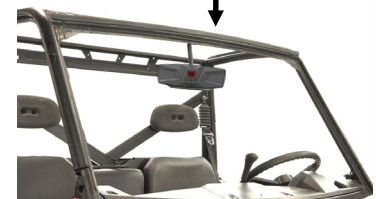

The Pro-Fit and Defender mirror clamp mounts to the middle of the bent sheet metal cross bar.


**3.**

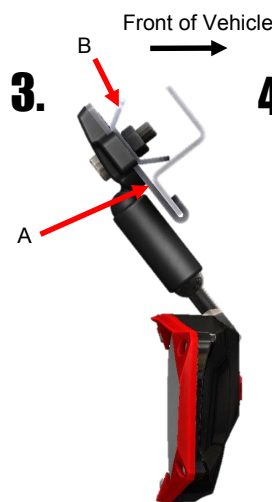

Place Pro-Fit or Defender clamp bracket A and B on the bent sheet metal middle cross bar as shown.

**4.**

B. Bracket has 2 mounting orientations. If not tight enough, flip bracket 180 degrees and tighten.

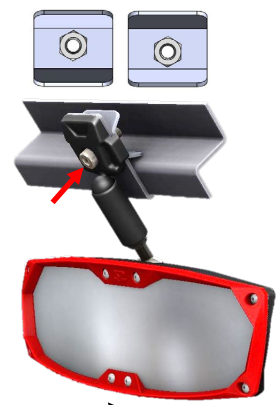

Line up the mirror with arm attached and install using M8 x 25mm socket head bolt. Adjust mirror as necessary.