

Installation & Operations Manual for Rear View Mirror

Round Tube Clamp Mounting:

Halo Rear View Mirror
18053- Defender Clamp
18055- 1.625" Clamp
18056- 1.75" Clamp
18057 - 2" Clamp
18058 - Pro-Fit Clamp
18059 - X3 Clamp

Contents:

Mirror



Round Tube Roll cage clamp



Mirror Arm


M8x20mm Button head Bolt (1)



M8x25mm Socket head Bolt (1)

Installation: For vehicles with round front cross tubes.

1.

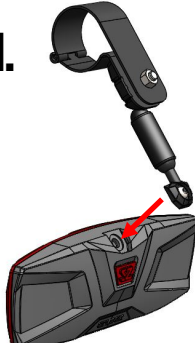

Screw Mirror Arm into Mirror using M8x20mm button head bolt.

2.

The round tube roll cage clamp mounts to the middle of the upper front cross tube.



3.

Mounting Location



Place round roll cage clamp around front cross tube.

4.



Line up the mirror with arm attached and install using M8 x 25mm socket head bolt. Adjust mirror as necessary.

Installation & Operations Manual for Rear View Mirror

Pro-Fit/Defender Clamp Mounting:

Contents:

Mirror



Pro-Fit Clamp Bracket A




Defender Clamp Bracket A



Clamp Bracket B



Mirror Arm

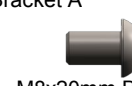


M8x20mm Button head Bolt (1)



M8x25mm Socket head Bolt (1)

Installation: Full & Mid-Sized Rangers with Pro-Fit Roll Cage Can Am Defender with Profiled Roll Cage.


1.

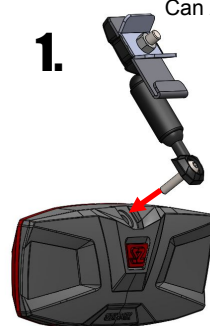

Screw Mirror Arm into Mirror using M8x20mm button head bolt.


2.

Mounting Location

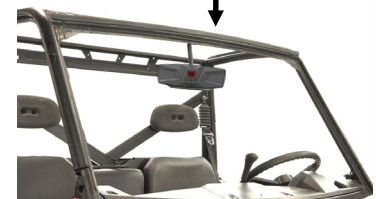

The Pro-Fit and Defender mirror clamp mounts to the middle of the bent sheet metal cross bar.


3.

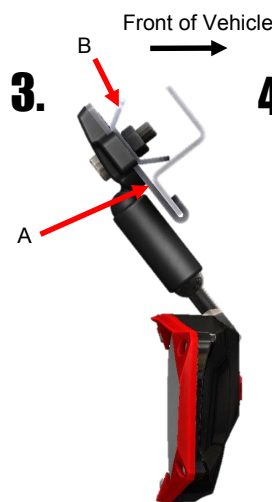

Place Pro-Fit or Defender clamp bracket A and B on the bent sheet metal middle cross bar as shown.

4.

B. Bracket has 2 mounting orientations. If not tight enough, flip bracket 180 degrees and tighten.

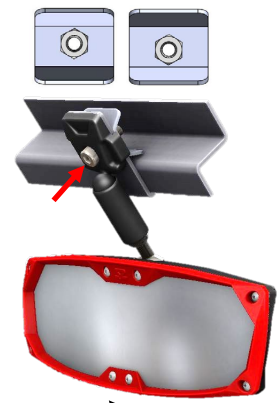

Line up the mirror with arm attached and install using M8 x 25mm socket head bolt. Adjust mirror as necessary.