



*"Setting the World's  
Performance Standards!"*


# Hot Air Elimination Kit for Polaris Rush (Upper Side)

## Part #32-5683 and #32-5673

### Kit Contents:

- 1 - Uper Side Vent
- 1 - Template
- 8 - Plastic Rivets

1. Remove side panel from the sled.
2. Cut out the provided template and lay to the middle recessed portion of the side panel (see illustration #1). Use a scribe or marker, mark around the ***inside*** of the template.
3. Using a dremel rotary tool with a drywall cutting bit (P.N. 560), cut around the inside of the scribed line and debur the holes.
4. Align the grate over the holes in the side panel. Using the grate as a guide and an 3/16" drill bit, drill and fasten one hole at a time using supplied plastic rivets.

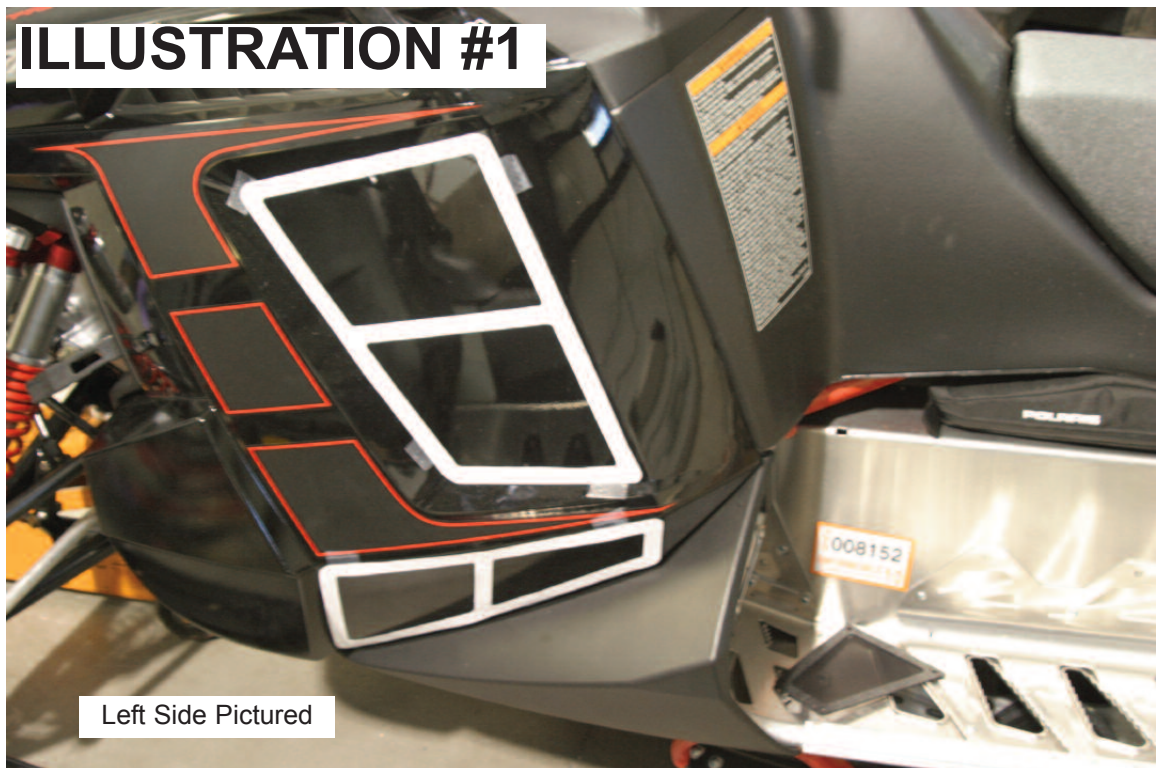

Feel the difference with Starting Line.

Find out more about frame & body we have.