

# Hot Air Elimination Kit for Polaris Axys p/n 32-628

## Kit Contents:

Hot air outlet vent left-hand side - 1 ea. p/n 32-612  
Hot air outlet vent right-hand side - 1 ea. p/n 32-613  
Plastic Rivet - 8 ea. p/n 14-223

**Note:** Will not fit with Polaris Kneepads

## Installation Instructions:

**Step 1:** Remove side panels, hood, and rear console.


**Step 2:** Place vent onto rear portion of console (see illustration #1) and align outside edge with outer edge of the flat portion of the console. Align the top edge of the Hot air outlet vent with the body line on the upper portion of the console. Mark around the outside of the vent with a marker and check to make sure you are to the outside of the stand-offs that are on the inner side of the console.

**Step 3:** Cut out the provided template, line it up with the marks previously drawn around the outside of the vent. Draw around the inside of the template with a marker and use a multi-purpose cutting tool to cut around the inside of the marked line.

**Step 4:** Align the vent over the new cutout in the console. Using the vent as a guide drill using a 3/16” drill and rivet vent into place using provided rivets.

**Step 5:** Reinstall rear console, hood, and side panels.



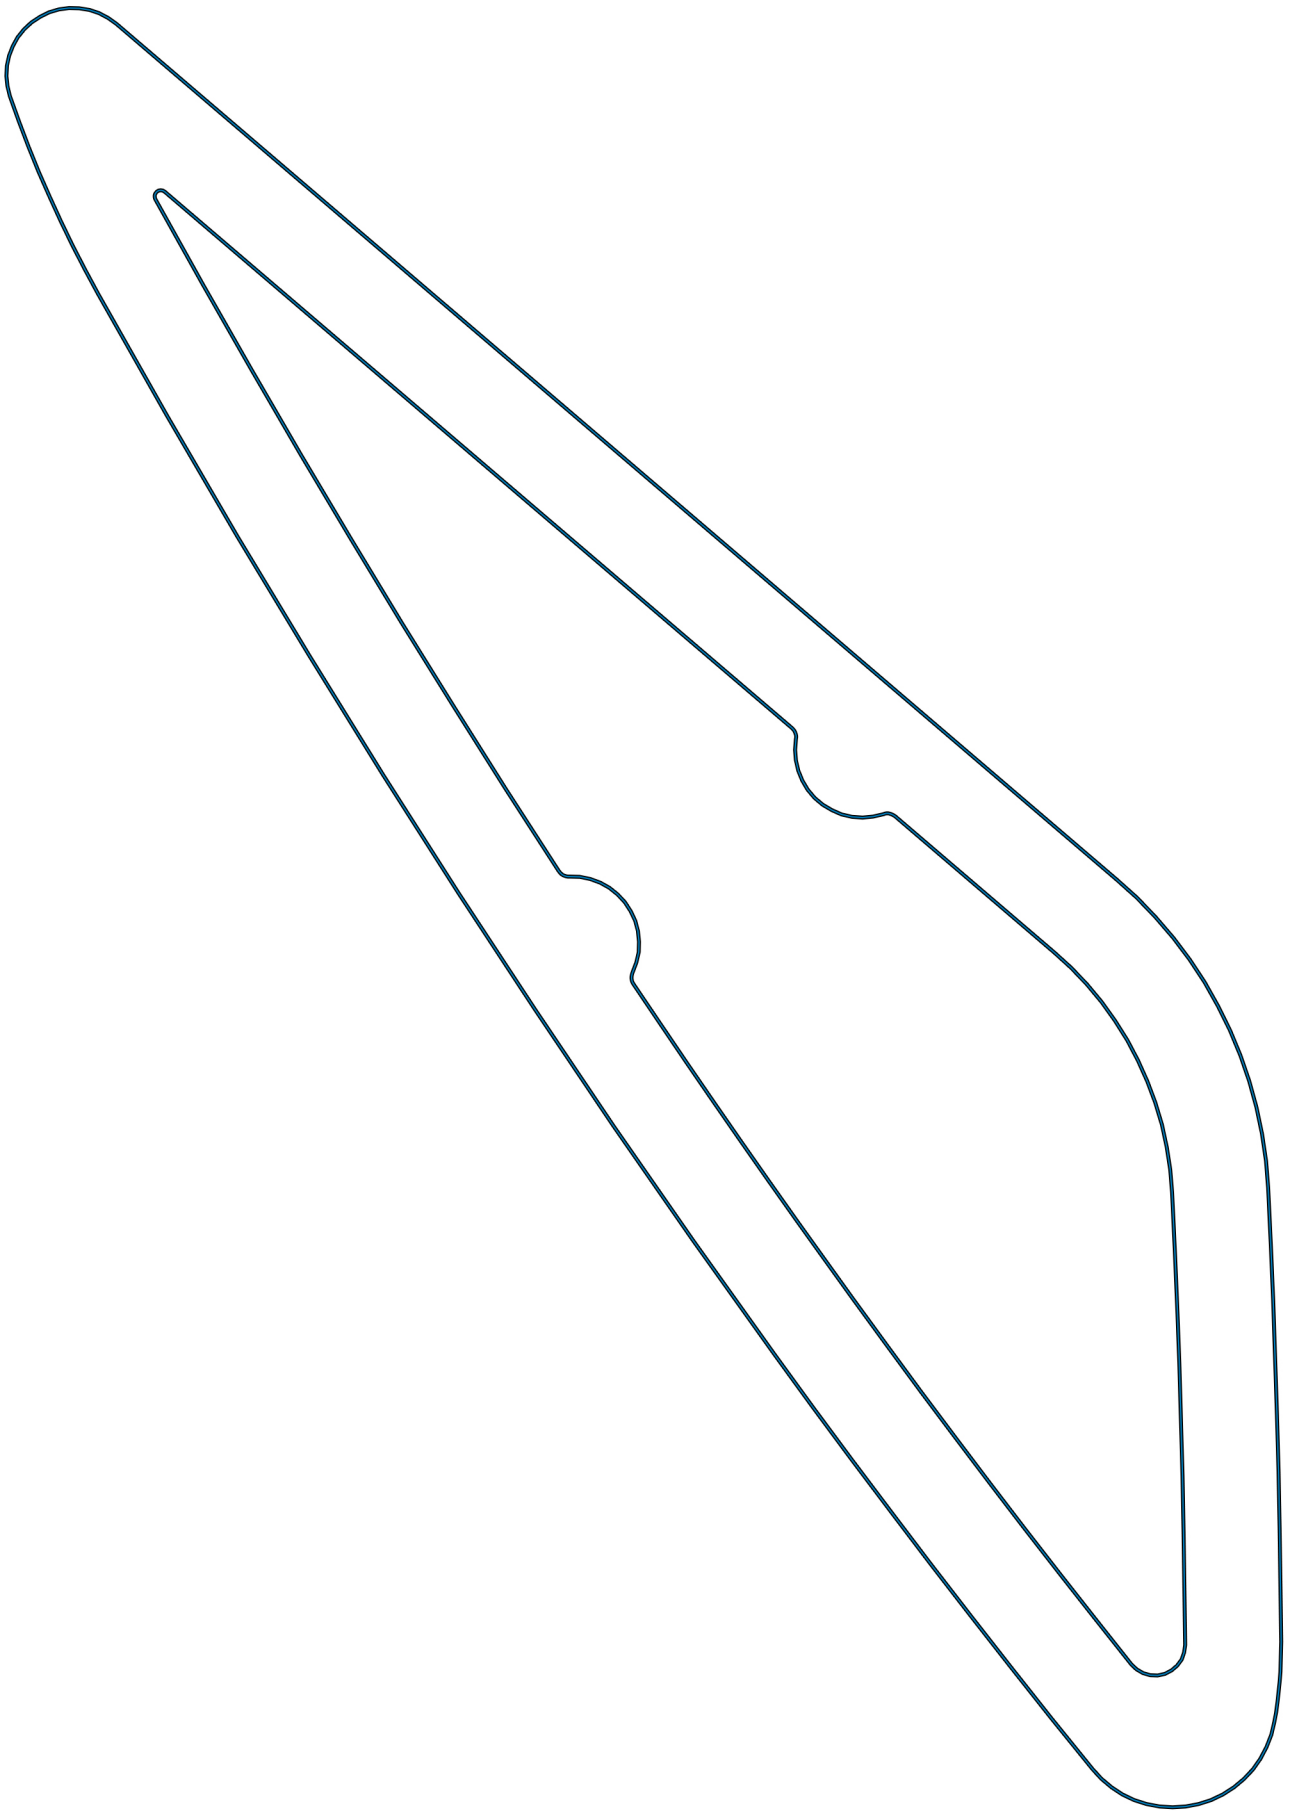

Feel the difference with Starting Line.

Find out more about frame & body we have.