

**NOTE: The Center Wedge Mounts between the Seats**

**Part # 7135 & 7145**


- 1) Install horseshow bracket around the cross bar between the seats using the #10-32 Screws & Washers mount the Speaker Wedge into the inserts. (Fig.1)
- 2) After the brackets are installed the Wedge will rotate loosely around the bar. Position to the desired angle. (Fig. 2)
- 3) Once the wedge is positioned drill 13/64" Hole through the hole in the bracket into the Center Bar. (Fig. 3)
- 4) Using the self-taping 1/4"- 20 X 1 1/4"screws mount the wege into place. (Fig. 4)
- 4) Connect the 10' wire harness to the back of the Wedge
- 5) Run Wire harness to desired location.



(Fig. 1)



(Fig. 2)

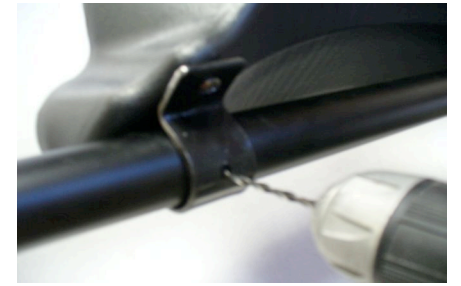

(Fig. 3)



(Fig. 4)



Installed Front View



Installed Rear View

**WIRING GUIDELINES**

- 1) Connecting Speakers:  
Splice wires from the Wedge into the left and right speaker wires under the dash
 

|                            |                               |
|----------------------------|-------------------------------|
| <b>Drivers Side - Left</b> | <b>Passenger Side - Right</b> |
| Green / Red ( + )          | White /Red ( + )              |
| Green ( - )                | White ( - )                   |

**FOR 7145 with LED Light Show**

NOTE: Not used for #7135 W/O LED Light Show

- 2) Connecting the Power for the LED Light Show  
**LED Light Show**  
Red ( + ) Attach to Battery or Fuse  
Black ( - ) Attach to a good ground

**RAZOR Brackets & Screws**



Part #70XXB (For 1.5" Bar)