




## Installation Guide: CF Moto Quick Release Kit

\* Compatible with CF Moto plastic racking only

1: Remove the plastic rack from the vehicle.

2: Insert the quick releases in the desired holes of the rack by referring to the diagram below

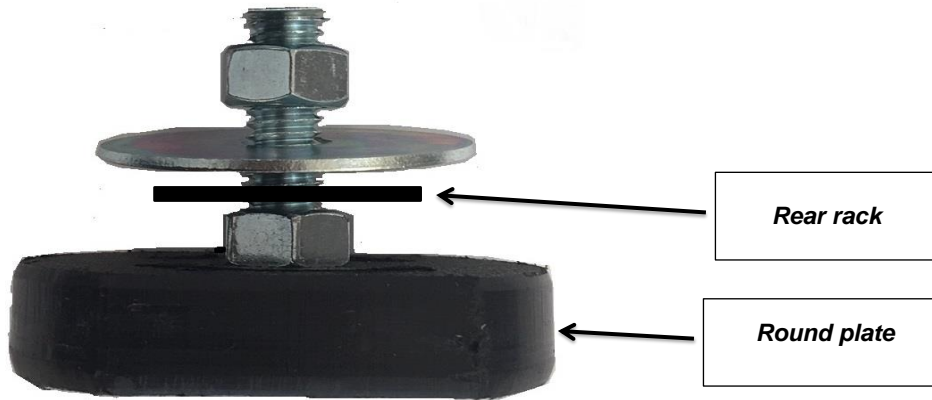

3: Re-install the rack on the vehicle

4: Place the accessory, like a cargo box for example, by lining up the bolts with the holes of the accessory. Fix the accessory with a washer and a knob as shown here.

