




**Installation Instructions for**  
**81156**  
**MAGNUM GRIP PASSENGER**  
**GRAB HANDLES**  
**2016-20 YAMAHA YXZ1000R**

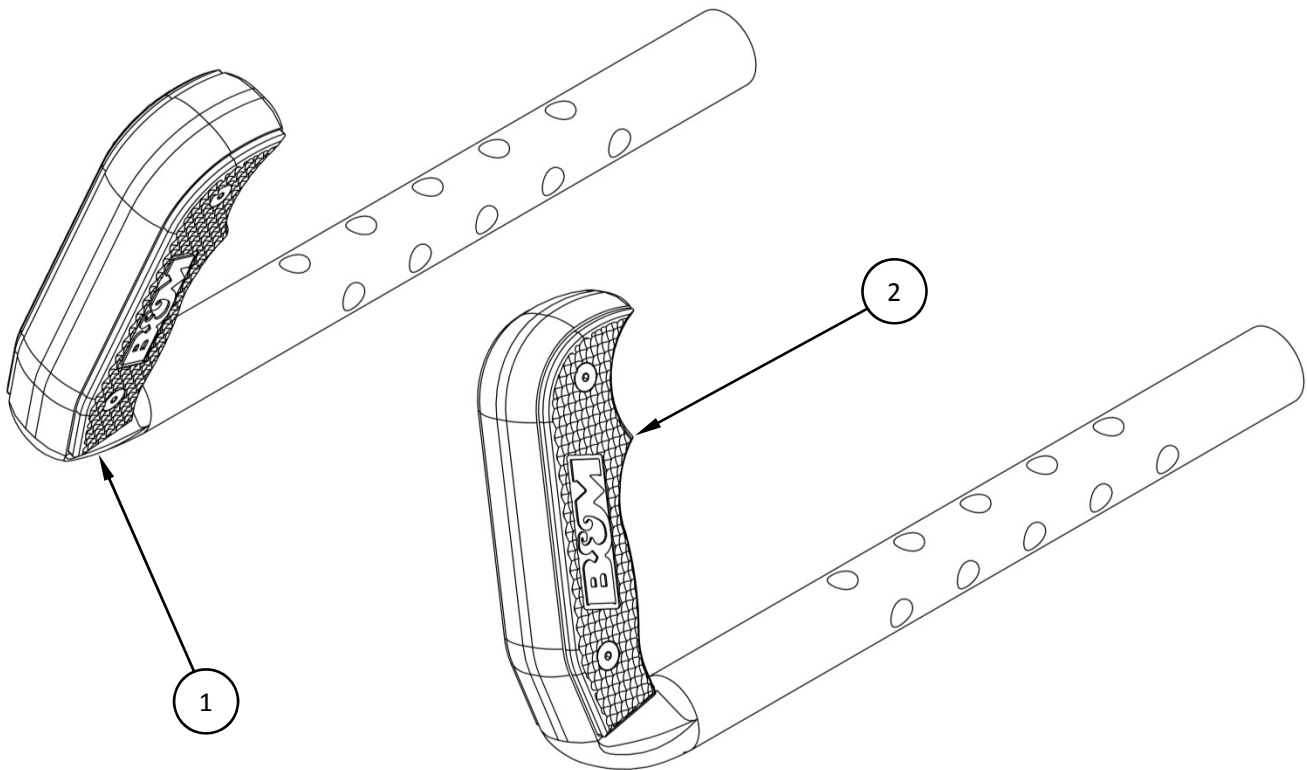


**PARTS LIST**

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	N/A - SHIPS ASSEMBLED	PASSENGER GRAB HANDLE ASSY, LEFT	1
N/A	4001768	• YAMAHA GRAB HANDLE, LEFT	1
	4001492	• MAGNUM GRIP SIDE PLATE, LEFT, DIAMOND KNURL, BLACK	1
	4001495	• MAGNUM GRIP SIDE PLATE, RIGHT, DIAMOND KNURL, BLACK	1
	3401537	• SCREW, 6-32 × 5/16" FLAT SOCKET HEAD	4
2	N/A - SHIPS ASSEMBLED	PASSENGER GRAB HANDLE ASSY, RIGHT	1
N/A	4001769	• YAMAHA GRAB HANDLE, RIGHT	1
	4001492	• MAGNUM GRIP SIDE PLATE, LEFT, DIAMOND KNURL, BLACK	1
	4001495	• MAGNUM GRIP SIDE PLATE, RIGHT, DIAMOND KNURL, BLACK	1
	3401537	• SCREW, 6-32 × 5/16" FLAT SOCKET HEAD	4


**Before starting**, take a moment to read and understand these instructions for your B&M Magnum Grip Gated Shifter. Use the parts drawing and list to verify your kit's contents. In the unlikely event of missing parts, please contact B&M Technical Support for replacements.

**We highly recommend that you retain all factory parts.**


**REMOVE THE STOCK PASSENGER GRAB BAR:**

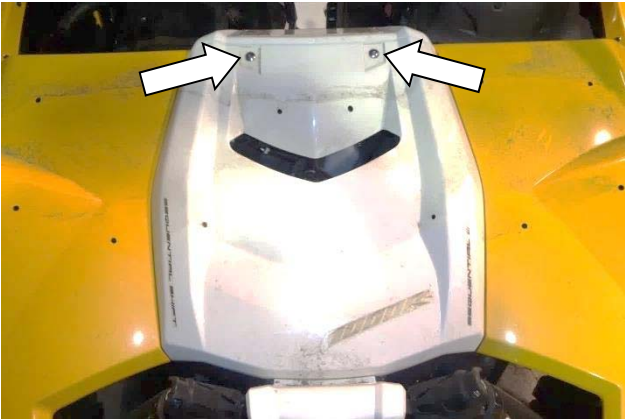

1. Remove the 2 screws at the rear of the service cover.

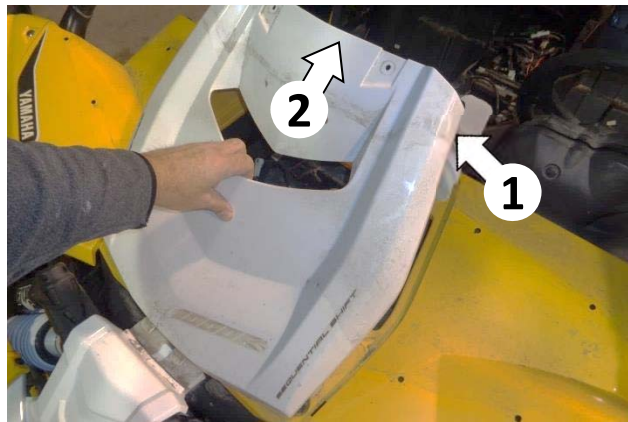

2. Remove the service cover by lifting up its rear end, then pulling the cover slightly rearward to release the locating tabs from their slots at the front.

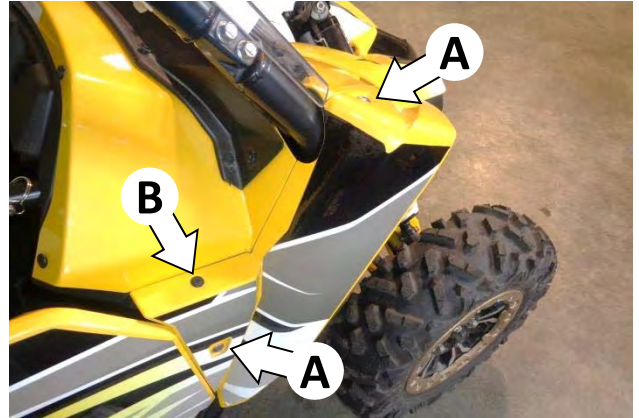

3. Remove the right front fender extension (body panel just forward of the passenger door) by removing 2 screws (A) and 1 plastic push rivet (B).




4. Remove the 2 screws at the front end of the front console cover.



5. Remove the 3 plastic push rivets in the passenger dash around the glove box.



6. Remove the bolt securing the passenger dash to the frame.

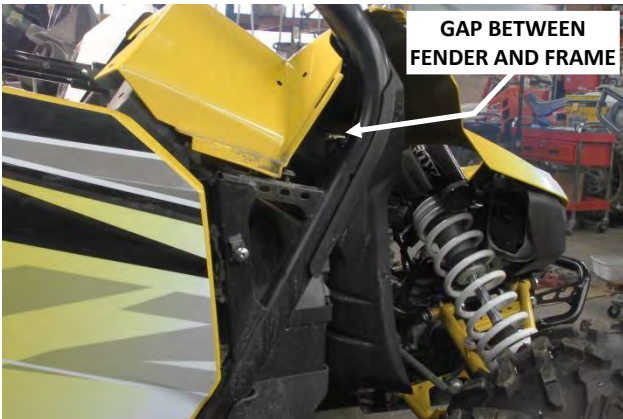

7. Gently lift up on the passenger dash / front fender to create a gap between it and the frame.



8. Through the gap, locate and remove the stop bolt and nut at the front of the passenger grab bar's right tube. Then remove the 2 grab bar adjustment pins, and remove the grab bar from the vehicle.


## RE-ASSEMBLE THE VEHICLE AND INSTALL YOUR NEW B&M GRAB HANDLES:




9. Reinstall the bolt securing the passenger dash to the frame.



10. Reinstall the 3 plastic push rivets that secure the passenger dash around the glove box.

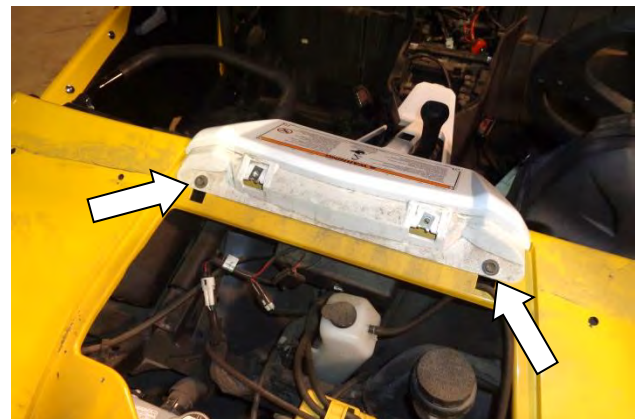


11. Reinstall the 2 screws at the front end of the front console cover.

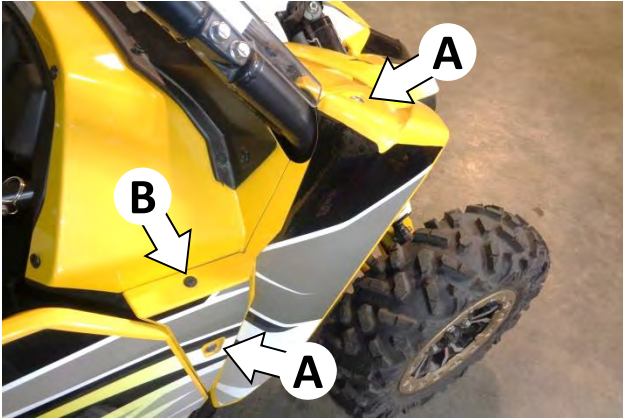

12. Reinstall the right front fender extension and secure it to the vehicle with 2 screws (A) and 1 plastic push rivet (B).



13. Insert the four tabs at the front of the service cover into their respective slots and lay the cover in place.

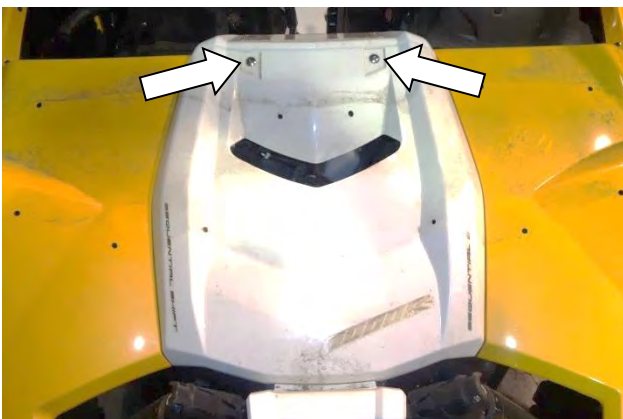

14. Fasten the service cover to the vehicle with its two screws.



15. Install the B&M passenger grab handles.

**GRAB HANDLE ORIENTATION AND ADJUSTMENT:**



16. Your B&M grab handles can be oriented near-vertical, or near-horizontal. Here, they are oriented slanted slightly inboard from vertical.



17. Here, the handles are oriented slanted slightly above horizontal.

**Note that, to change the handles between vertical and horizontal orientation, they must change sides. That is, the left vertical handle becomes the right horizontal handle, and vice versa.**

Note also that the handles have a 4" range of adjustment for reach, in 1" increments.

**Congratulations, the installation of your new B&M Magnum Grip Passenger Grab Handles is now complete!**

**IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE**



**Customize your new Grab Handles with B&M Magnum Grip Accessory Side Plates!** Available in rosewood; billet aluminum (black or natural); and diamond knurl polycarbonate (seven colors).