Fits Polaris **RIDECOMMAND** **MPS-RCLOC**

ASSEMBLY INSTRUCTIONS

MPS-RCLOC to Ridecommand Connector
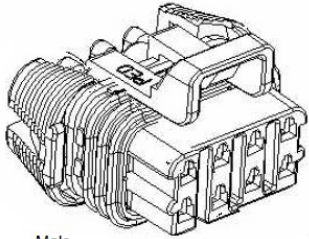
Lock Clip
(CPA)

Male
Vehicle Side
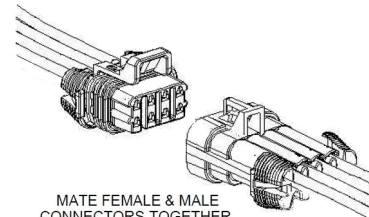Ride command
Connector
AMP1,
AMP2,
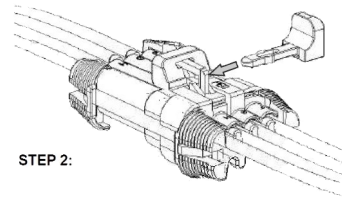AMP3
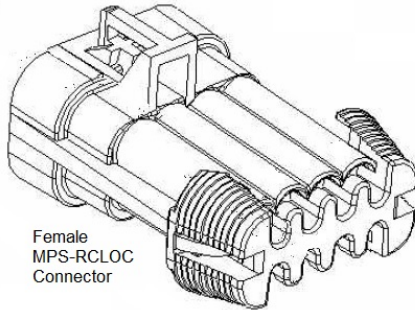
Female
MPS-RCLOC
Connector

ASSEMBLY INSTRUCTIONS
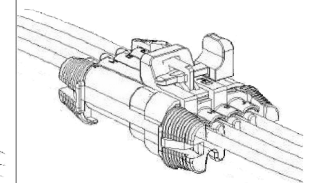**MPS-RCLOC to Ridecommand Connector**

STEP 1:   MATE FEMALE & MALE
CONNECTORS TOGETHER.

STEP 2:

A. Hold the mated connectors. Hold the
locking clip (CPA) with the end extending
toward the connector.

B. Slide the extension into the slot applying
pressure with your fingers until the locking
clip snaps into place.

COMPLETED

Check out the collection of powersports sound systems we offer.