
Installation Guide for Wes Quick Release System on Outlander 2013 & Wes Classic.



Step # 1

Underneath the Wes Classic box seat, drill a 1/2" hole where indicated.

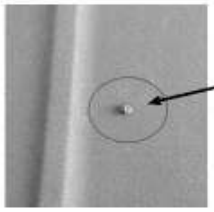

We recommend a 1/2" spade drill bit.



Step # 2

Place the 4 luggage rack anchors at the indicated spots.





Holding bolt piece.

Rear luggage rack.

Luggage rack anchor.

Step # 3

Place the Wes Classic box on the Outlander's rear rack by lining up the drilled holes with the 4 standing bolts.





Knob.

Fender washer.



Wes Classic's bottom lid.



Rear luggage rack with assembled anchor

Step # 4

Inside the Wes Classic box, place a washer on each bolt than screw a knob on each of them.

