# 2 pc 1,000 lb. WHEEL DOLLY SET

Stock Number W54013

# **OWNERS MANUAL**



## **IMPORTANT SAFETY INFORMATION**

Read these safety warnings before operation.

WARNING! Failure to heed these warnings may result in loss of load, damage to dollies, and/or dolly failure resulting in personal injury or property damage.

WARNING! Use ONLY on a hard, level surface capable of sustaining the load. Use of dollies on other than hard, level surface can result in dolly instability and possible loss of load.

WARNING! DO NOT WORK UNDER CAR WHILE ON DOLLIES.

Do not overload dollies beyond rated capacity. Overloading can cause damage to or failure of the dollies.

Be sure all personnel are clear of load before moving load.

#### **ASSEMBLY INSTRUCTIONS**

Tools Recommended: (not included) 14mm wrench or socket & ratchet or adjustable wrench

- 1. Align the caster assembly with the pre-drilled holes in the wheel dolly frame.
- 3. Insert bolts through the frame and the caster assembly plate and secure with a lock washer and hex nut.
- 4. Finger tighten all bolts.
- 5. Repeat steps #1 #4 on the three remaining casters.
- 6. Tighten all bolts with a 14mm wrench, socket or an adjustable wrench.


#### Specifications are subject to change without notice

W54013 Capacity: ...... 1,000 lbs. per dolly

### **FEATURES & BENEFITS**

- · Move your car, riding mower, trailer and much more, in any direction, with just a push
- · Makes storage, service and restoration easier
- · Equipped with cast iron wheels for maximum durability and four swivel, ball bearing casters for ease of movement

# **PARTS LIST**

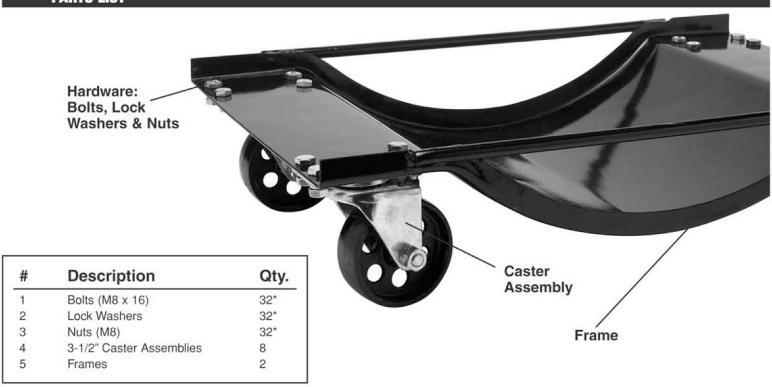

\* Replacements parts available in W54013HW Hardware Kit Replacement 3-1/2" Caster Assemblies available, part number W54013-1

#### LIMITED WARRANTY

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. WILMAR warrants this product to be free from defects in materials and workman-ship under normal use and service. You may return this product for a free replacement within 90 days from the date of purchase, provided that product is returned immediately to place of purchase. After 90 days and up to 1 year from date of purchase, WILMAR will replace at no charge any parts which our examination shall disclose to be defective and under warranty. This warranty shall be valid only when a sales receipt showing the date of purchase accompanies the item being returned.

The provisions of this warranty shall not apply to any part which is used for a purpose for which it is not designed, or which shall have been repaired or altered in any way so as to affect adversely its performance and reliability, nor shall this warranty apply to any part which has been subject to misuse, neglect or accident.

WILMAR does not authorize any other person to assume any liability in connection with its product and the implied warranty of merchantability and fitness as limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

© Copyright 2006 Wilmar Corporation - All rights reserved.

On occasion, after printing of our literature is completed, our manufacturers may make changes and/or modifications to merchandise which will not be reflected in this manual. Although we strive to maintain complete and accurate information, it is possible in some instances, that the product may differ slightly from printed specifications. Illustrations are intended for reference only. Actual merchandise may vary. Wilmar is not responsible for typographical errors.