

Installation & Operations Manual - 2014 Yamaha Viking Back Panel



Kit Contents:


- | | |
|--------------------------|--------------------|
| 1. Plastic Clamps (2) | 4. Nuts (2) |
| 2. Button Head Bolts (2) | 5. Reinforcing Rod |
| 3. Washers (2) | |



Installation Information:

This product does not require any modifications to your vehicle. Please familiarize yourself with all the steps before beginning assembly.

Installation Procedures

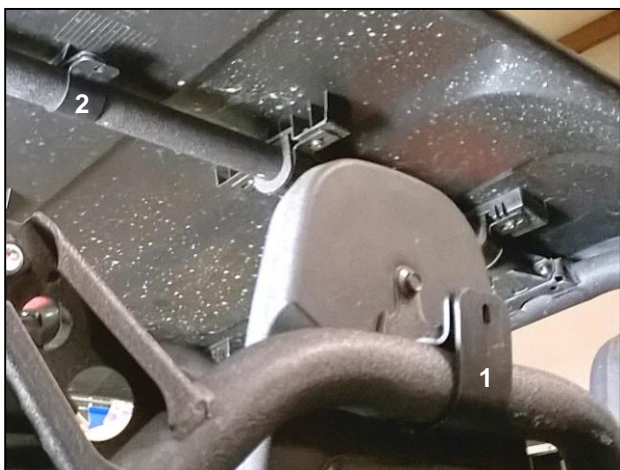

1. Attach a plastic clamp on the rear bar behind the center headrest. The clamp should be oriented with the flange away from the headrest as shown above.
2. Attach a clamp on the rear upper crossbar as shown above. The flange should be facing backwards.



3. Attach the aluminum rod onto the top clamp with a bolt, nut and washer. Bend the rod down and attach to the other plastic clamp with a bolt, nut and washer. Make sure the bolts face inward to avoid puncturing the textiles.



4. Slip the top four flaps of the back panel between the rear upper crossbar and the roof and attach.



5. Secure the remaining flaps.

Compatibility Info:

This windshield is designed to work with other Seizmik branded Accessories for the Yamaha Viking as well as OEM Yamaha branded hard tops. Please note Seizmik cannot guarantee fitment with other branded aftermarket products. Please research installation details on our products and others when trying to combine different branded accessories.



6. Pull the loop through the side of the vehicle between the roll cage and roof.



7. Match the velcro strip near the loop and velcro on the flap and attach.



8. Secure the remaining flaps on the sides of the vehicle. If needed, refasten the velcro straps to adjust the fitment of the textiles.



9. Attach a strip of self adhesive Velcro on the back side of the cab on the lower crossbar. Attach back panel lower flaps.



10. Secure the back panel with two Velcro loops around the rear pillars of the cab. There is one behind the passenger and drivers seats.



11. To roll up the back window, unzip the vinyl section and roll up. Use the vinyl straps to secure the rolled section.